

## Lights at Min when Unoccupied (CN100)

**Product:** CN100 – (Validated with version 4.1)      **Article ID:** 033009-RLL/AM-02

**Date:** March 30, 2009

**Issue:** Using (Leviton Personal Dimmer (LPD)) software Version 1.00G, user cannot set “Lights at Min when unoccupied: on CN100.

**Solution:**      **Step 1:** Obtain CN221 controller.

**Step 2:** Assign the CN221 to the CN100 power pack.

**Step 3:** Set “Lights at Min when unoccupied” setting via CN221 controller.

Programming CN100 Unoccupied Mode (refer to CN221 [installation instructions](#) for additional information):

1. Pull off the Decora® Screwless Wall plate. Reverse wall plate and adhere Programming Label to the inside so that label is facing out (refer to [installation instructions](#)). This label is to be used as a programming guide.
2. Using a small screwdriver or pen-point, press the program button (refer to [installation instructions](#)). LED #1 will flash to indicate the **Manual Time-out** selection. **NOTE:** When any of the LED’s 1-5 flash, the Controller is in the program mode. Place wall plate over frame of the Controller. For multi-gang installations (refer to [installation instructions](#)).
3. To program the **UnOccupied** mode: Press the large lower rocker (refer to [installation instructions](#)). LED #4 will flash indicating the **UnOccupied** mode selection. LED #6 will be lit indicating the default **Lights OFF**. To program **UnOccupied** mode **Min.**, press the small upper rocker. LED #5 will be lit indicating the **UnOccupied** mode **Min.** To return to default **Lights OFF**, press the small lower rocker.
4. To exit **Program Mode**, press the large lower rocker (refer to [installation instructions](#)). LED #7 will flash indicating the Controller will exit the program mode in 3 seconds or if there is no activity for 2 minutes during any of the steps, the Controller will exit the program mode.

**Contact:** If you have any questions or concerns, please call LMS technical support at (800) 959-6004.