

Architectural Exterior Range

Installation instructions for Wall/Post light

JCC | a **LEVITON** company

WARNINGS AND CAUTIONS

- To avoid electric shock, serious injury or property damage, isolate power before installing, removing or servicing the product
- It is recommended that this product is installed by an electrician or a competent person with sufficient experience to install this product.
- To be installed in accordance with the local current wiring regulations and standards
- Any broken or damaged parts should be replaced as soon as possible. JCC will not accept responsibility for claims arising from sub-standard installations; which will void the warranty
- Ensure that you have the tools and accessories required to complete the installation correctly: Isolate the power before starting the installation
- These products are designed for connection to a 200-240V~ 50/60Hz supply.
- This luminaire is suitable for indoor and outdoor use.
- It may be necessary to upgrade your MCBs to allow for increased inrush current.

ENGLISH

Specifications Colour temp: 3000K Ra: 80


Product code	Wattage	Lumens	LpcW
JC17017	18W	600	33

Available finishes: Anthracite or White

Standard version connection

200-240V~ 50/60Hz / Class I


 
Figure 2. Mains input







- Read instructions and check that you have all of the tools and accessories required to complete the installation correctly. Isolate power supply before starting the installation.


Installation procedure

      1. Remove cover/body.
2. Use inner frame as template for fixing.
3. Cable entry must be in the centre of the base as shown in Fig 1. Make sure you have sufficient cable to reach connection point.
4. Feed power supply through base frame and along the channel on the side of the frame.
5. Fix frame to flat surface or wall.
6. Remove back plate from inside cover/body to access connections.
7. Feed cable through grommet (ensure water tight).
8. Terminate connections as per Fig 2.
9. Refit back plate to cover/body.
10. Refit cover/body to inner frame.
11. Turn on supply and test for operation.

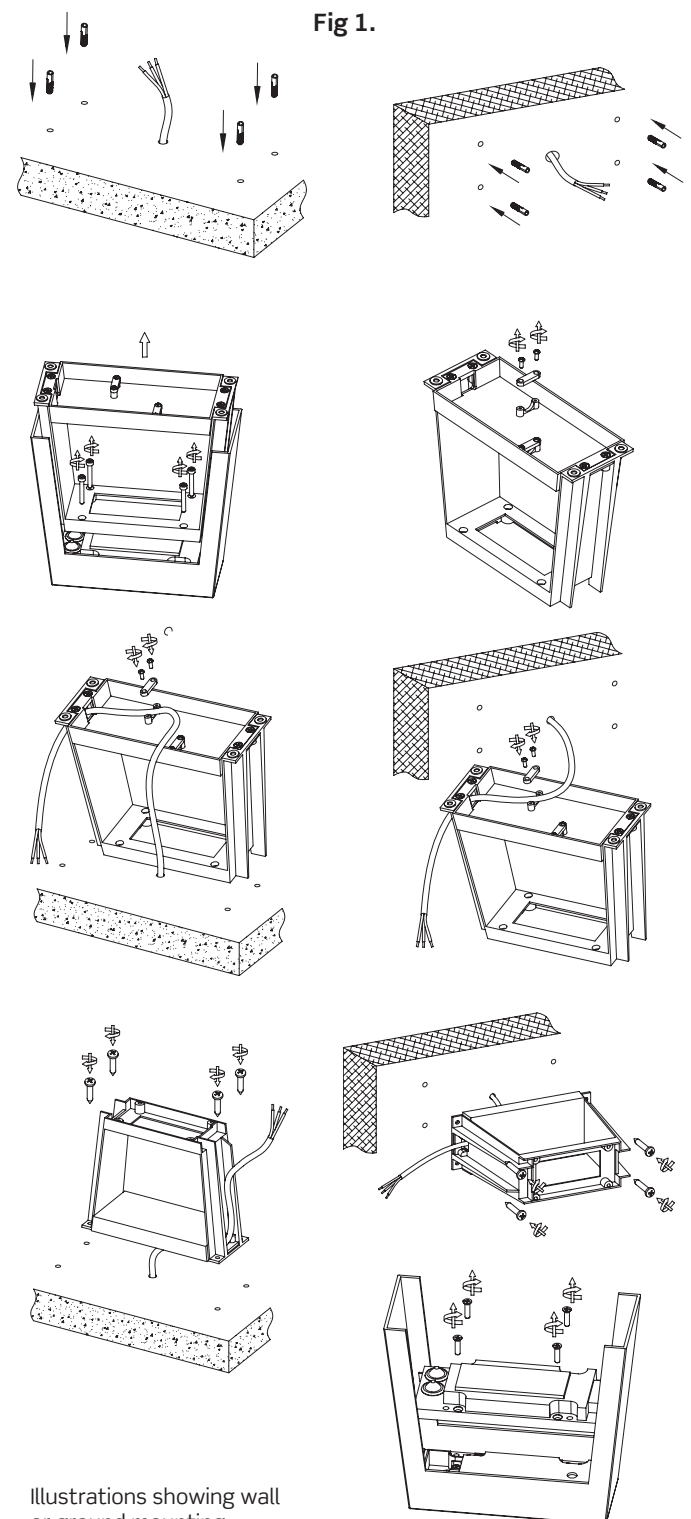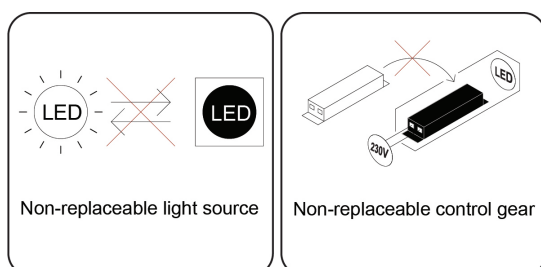

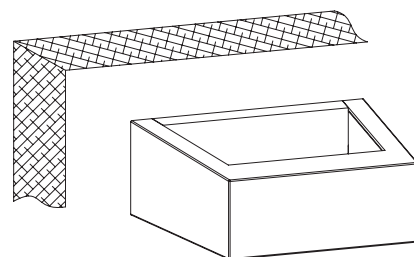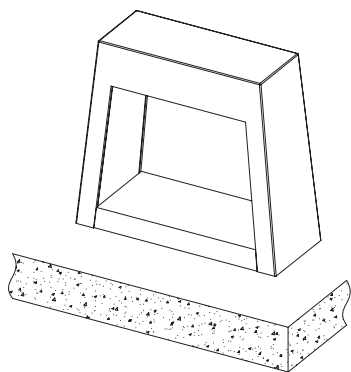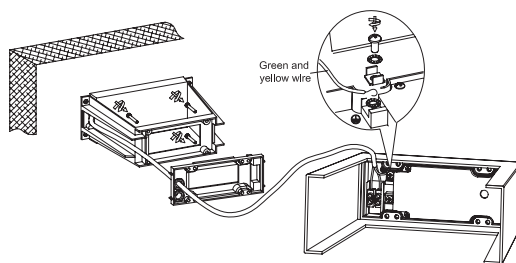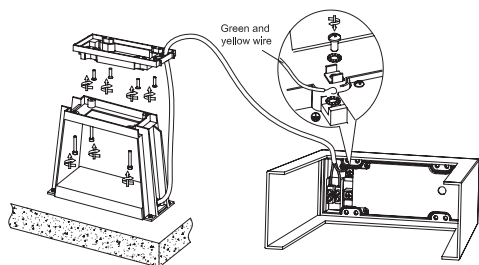

Profile & Dimensions

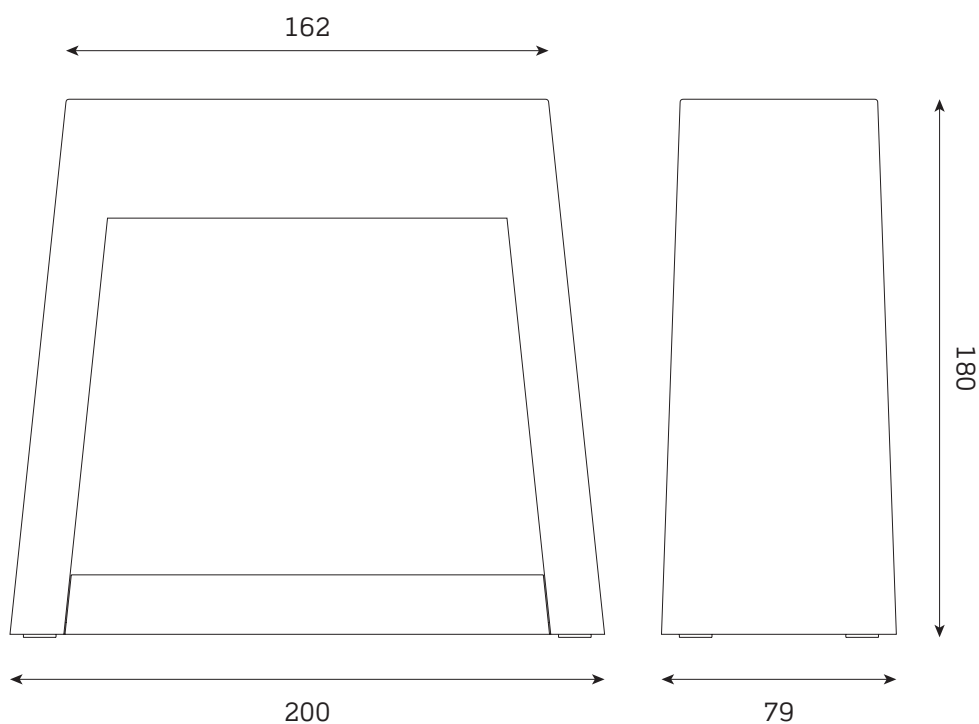 

All dimensions in millimetres

You can help protect the environment. Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal centre. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection service.

Important warranty information

This product is supported by a 2-year standard warranty which will extend to 3 years if registered within the first year of purchase. Please register at jcc.co.uk/warranty - Terms and conditions apply.

The installer will be asked to provide the following information, which is detailed on a label attached to the luminaire's chassis:
Product Code/Date Code.