

Architectural Exterior Range

Installation guide for exterior tapered bollard

Important information

- It is recommended that luminaires are installed by a qualified electrician to ensure the installation complies with the local current wiring regulations.
- Any broken or damaged parts should be replaced as soon as possible. JCC will not accept responsibility for claims arising from sub-standard installations.
- These products are designed for connection to a 100-277V~ 50/60Hz supply.
- The light source of this luminaire is not replaceable: When the light source reaches the end of its life, the whole of the luminaire must be replaced.
- This luminaire is suitable for indoor and outdoor use.
- It may be necessary to upgrade your MCBs to allow for increased inrush current.

INSTALLATION


ENGLISH

Specifications Colour temp: 3000K Ra: 80

| Product code | Wattage | Lumens | LpcW |
|--------------|---------|--------|------|
| JC17018 | 7W | 300 | 43 |

100-277V~ 50/60Hz / Class I

 
Figure 1. Mains input




- Read instructions and check that you have all of the tools and accessories required to complete the installation correctly. Isolate power supply before starting the installation.

Installation procedure

 1. Remove front cover.
2. Remove diffuser.
3. Secure base in desired location.
4. Feed power supply through compression coupling on the diffuser and ensure it is tight.
5. Connect supply as per Fig 1.
6. Refit diffuser.
7. Refit outer cover.
8. Turn on supply and test for operation.

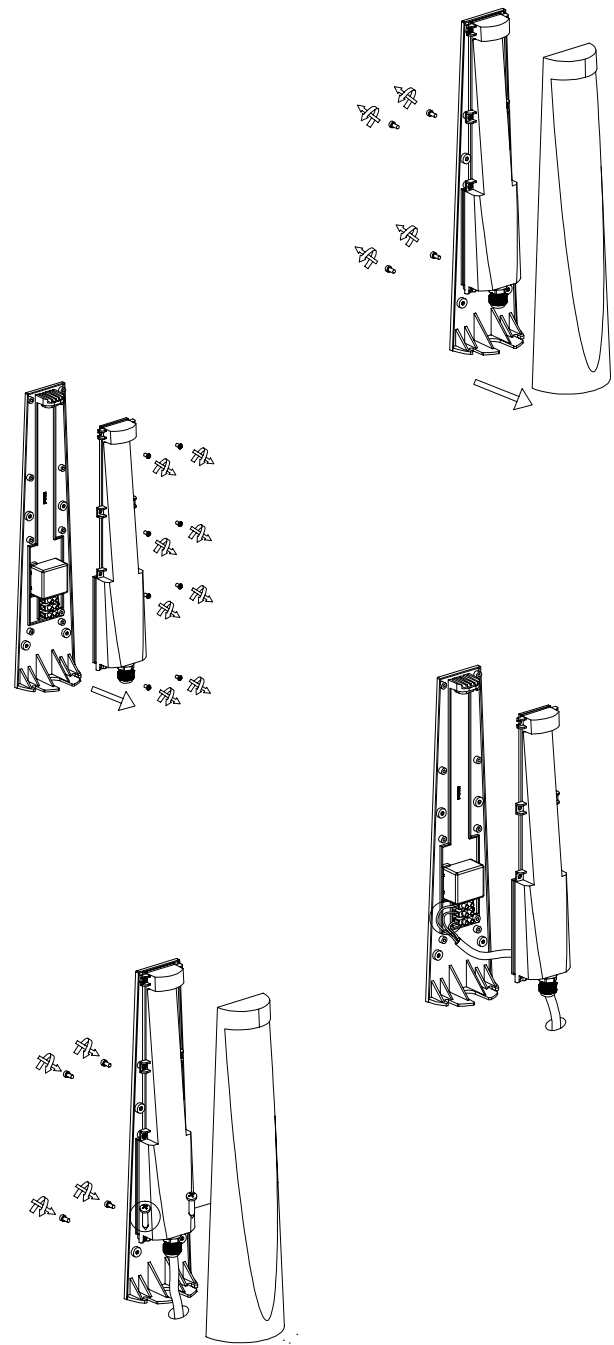

Profile & Dimensions

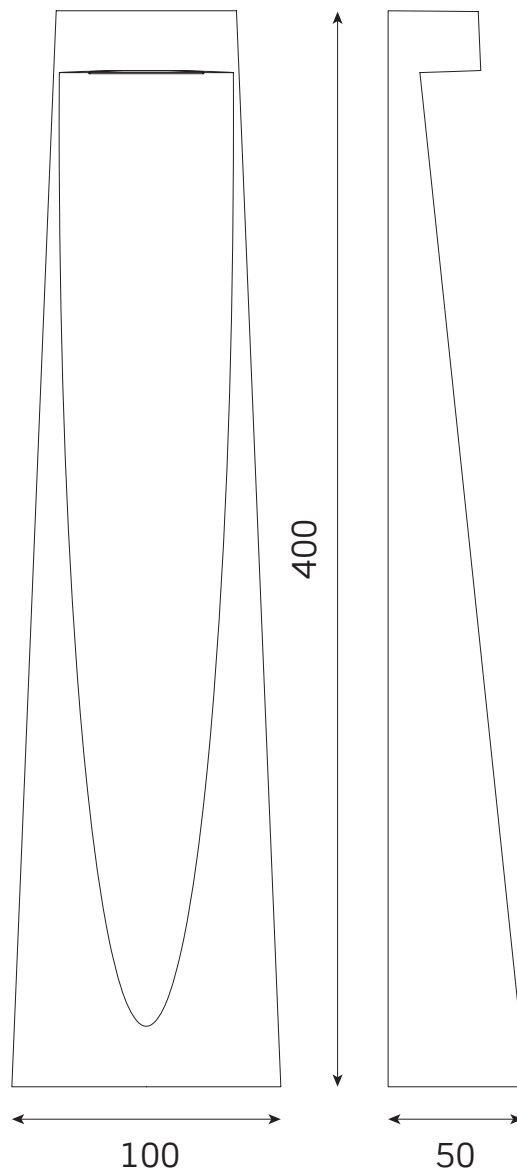 

All dimensions in millimetres

Important warranty information

The Architectural exterior range is supported by a 3 year warranty; which must be registered online at jcc.co.uk/warranty.

The installer will be asked to provide the following information, which is detailed on a label attached to the luminaire's chassis: Product Code/Batch Code.