


OCCUPANCY SENSING WITH CONTACT CLOSURE TO HVAC SYSTEM

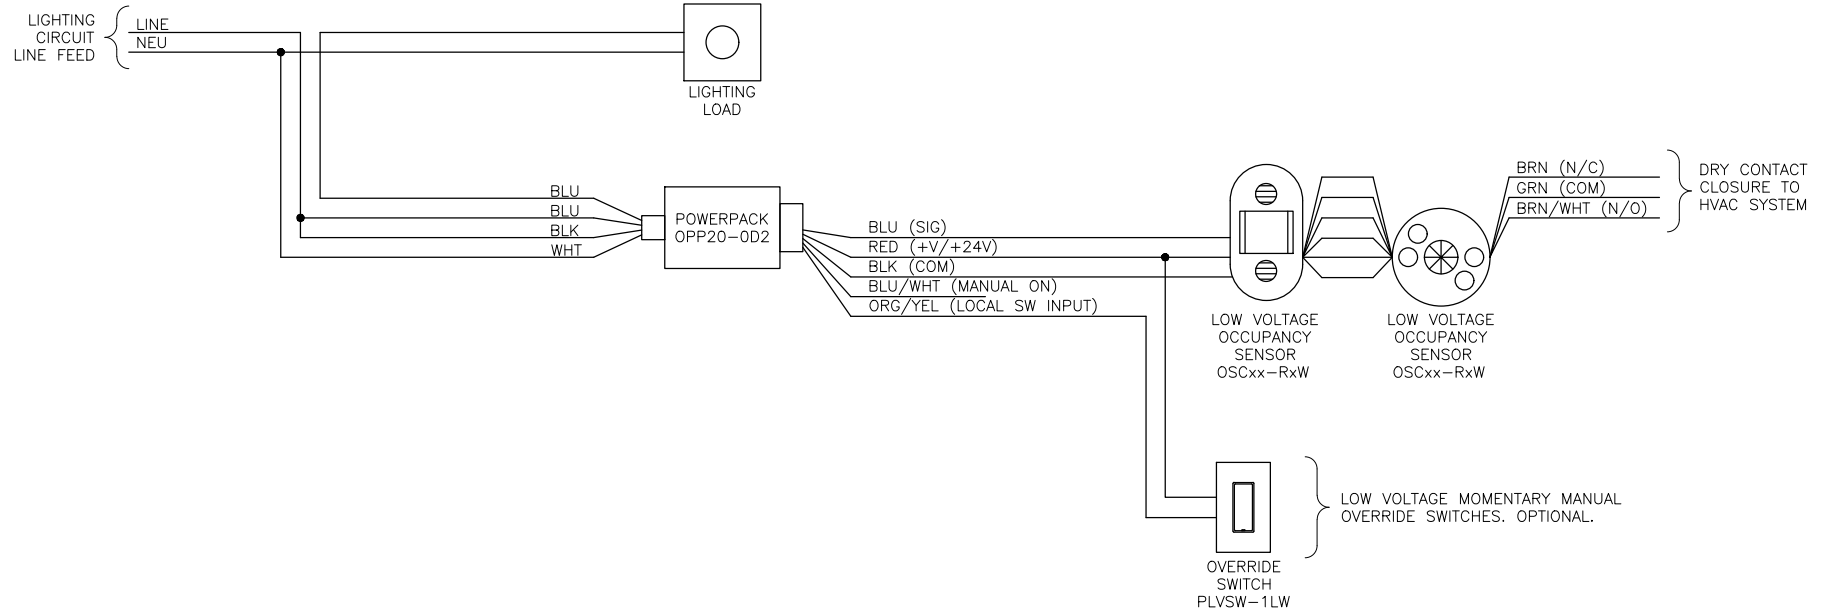

NOTES:

1. OCCUPANCY (AUTO ON/OFF MANUAL ON/OFF) CONFIGURATION SHOWN. VACANCY (MANUAL ON/OFF, AUTO OFF) CONFIGURATION UTILIZES POWER PACK MANUAL ON (BLU/WHT) INSTEAD OF SIG (BLU) LEAD.
2. TWO SENSORS SHOWN. QUANTITY OF SENSORS MAY BE CONNECTED IN PARALLEL UP TO THE LOAD RATING OF THE POWER PACK.
3. DRY CONTACT CLOSURE TO HVAC SYSTEM AVAILABLE AS NORMALLY OPEN OR NORMALLY CLOSED. TERMINATE TO LEADS AS HVAC SYSTEM REQUIRES.
4. HVAC RELAY OPERATION CORRESPONDS TO SENSED ROOM STATE. MANUAL SWITCH OPERATION DOES NOT EFFECT HVAC RELAY STATE.
5. OPTIONAL SWITCH REQUIRED FOR ANY MANUALLY OPERATED CONFIGURATION. ADDITIONAL SWITCHES MAY BE ADDED IN PARALLEL FOR 3-WAY, 4-WAY, N-WAY OPERATION.
6. INDIVIDUALLY CAP UNUSED LEADS.