


OCCUPANCY SENSING TWO LEGS SAME ZONE

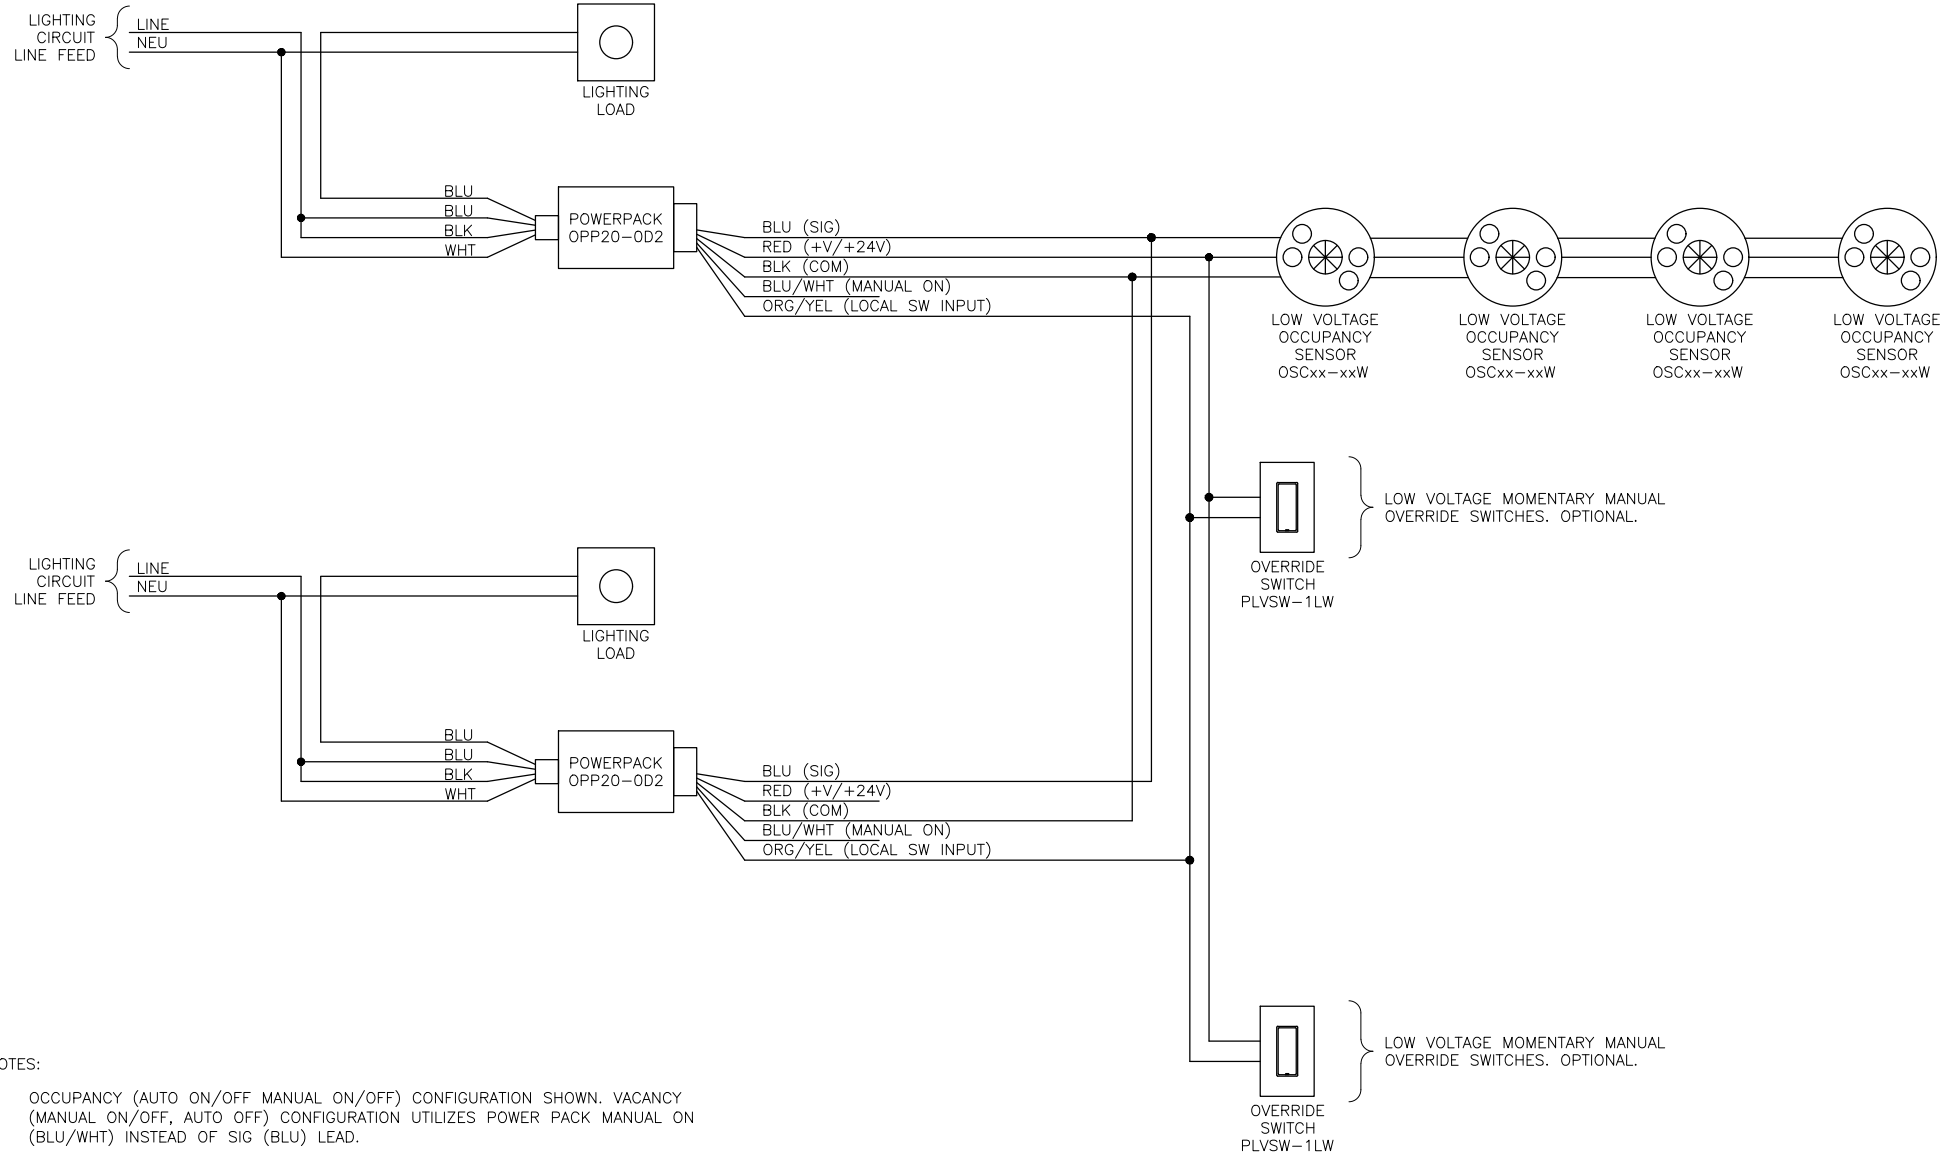

NOTES:

1. OCCUPANCY (AUTO ON/OFF MANUAL ON/OFF) CONFIGURATION SHOWN. VACANCY (MANUAL ON/OFF, AUTO OFF) CONFIGURATION UTILIZES POWER PACK MANUAL ON (BLU/WHT) INSTEAD OF SIG (BLU) LEAD.
2. CONFIGURATION SHOWN WILL CONTROL BOTH FED/LOAD COMBINATIONS THE SAME FOR OCCUPANCY AND MANUAL SWITCH OPERATION.
3. FOUR SENSORS SHOWN. QUANTITY OF SENSORS MAY BE CONNECTED IN PARALLEL UP TO THE LOAD RATING OF THE POWER PACK.
4. OPTIONAL SWITCH REQUIRED FOR ANY MANUALLY OPERATED CONFIGURATION. ADDITIONAL SWITCHES MAY BE ADDED IN PARALLEL FOR 3-WAY, 4-WAY, N-WAY OPERATION.
5. INDIVIDUALLY CAP UNUSED LEADS.