8" Theater and Television Fresnels Cat No FR2TH FR2TV

Cat. No. FR2TH, FR2TV User Guide



PK-93196-10-00-0


Leviton Fresnels utilize the latest advances in lighting technology to provide the best quality fixture in the market. This operating guide will help you to become more familiar with your spotlight. The major components of the fresnel are:

- The Door Assembly Includes the lens door, accessory clips, latch mechanism, safety latch and the fresnel lens.
- The Lamp Carriage Includes the lampholder, wiring, reflector and the lampholder platform and associated parts.
- The Focus System Includes the focus handle, pinion gear and associated hardware.
- The Housing Includes the extruded housing, cool focusing handles, and simple, rugged design.


Functions


Lamp Installation

Disconnect the unit from power. Open the lens door by pulling the top of the door pivot latch towards you. This will allow the door to swing open, revealing a lamp carriage assembly with a lampholder and reflector mounted to the platform.

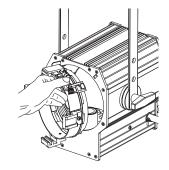

To lamp the theatre fixture, Cat. No. FR2TH, align the flanges of the pre focus lamp with the respective indentations of the pre focus lampholder. Please note the lamp flanges are asymmetrical, and the large lamp flange must align with large socket indentation. After alignment, press lamp down by the ceramic base and twist clockwise 90° until lamp locks in position.

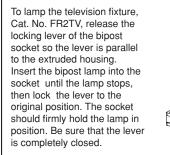

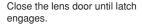

NOTE:


Please do not touch the quartz lamp envelope during installation. If this occurs, clean the lamp with isopropyl (rubbing) alcohol and lint free, clean cloth.

These Leviton fresnels are UL listed to 1000 watts. Any usage of higher wattage lamps is improper usage of the fixture and voids any manufacturing warranties. Please use only the lamps listed in the charts shown here.

Focusing

The Leviton fresnels have an extremely wide focusing range, with spot focus applications to 85' and ten foot projected diameters at only 8' in full flood focus. The focus system is simple to operate and maintain.

The focusing is controlled on the righ side of the fixture, simply turn the handle clockwise for flood focus and counter clockwise for spot focus.

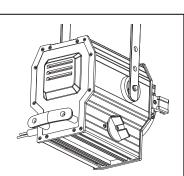

Beam Control

The fresnel spotlight is a soft focusing projector that may be framed to reduce flare or direct the light through Leviton barn doors and top hats. The beam may be further softened through wire scrims or filters. Color temperature may be shifted with Leviton dichroic glass filters, or normal color medium.

The Leviton fresnels accept industry standard 10" x 10" accessories, allowing the fixtures to accept automated color changers, liquid crystal strobe effects and many other items.


Color

Lee Color Effect Filters are recommended for all filter applications. These filters are available in over 175 colors, color corrections, and diffusion selections. Lee Filters are available in both 21" x 4" sheets and 25' x 4' rolls.

Maintenance


Reflector

The reflector may be accessed by opening the lens door. Remove lamp to access reflector surface for cleaning. The Alzak® finish requires little maintenance, occasionally wipe with isopropyl (rubbing) alcohol, and a lint free cloth. Strong alcohol or acidic cleaners **MUST NOT** be used.

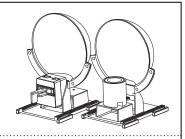

Lens

The lens will become dirty due to environmental conditions. To clean, use a lint-free cloth and rubbing alcohol. Do not use commercial lens cleaners. If significant dirt and grime exist, remove the lens from the fixture and place lens in clean water WITHOUT SOAP. Rinse grime away, clean the reflector with alcohol.

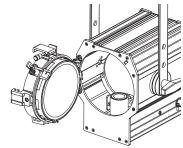


Focus System


The rack and pinion focus system can lose tension over long periods of time by expansion and contraction of the fixture housing and components, or the gear itself could move causing improper fitting against the cast rack. Both items are easily resolved.

The tension is adjusted by turning the center screw within the focus handle while the fixture is aimed 90 degrees down, so the full weight of the lampholder assembly bears on the focus gear. Tighten the screw until the assembly does not move. Do not over tighten.

The focus gear should interface smoothly with the rack on the focus platform. To adjust, aim fixture to a horizontal axis or place unit on a table. Remove the focus handle. Loosen but do not remove the screws on each side of the focus gear. Reach inside the fixture and move the socket assembly manually. Adjust the focus gear so the assembly is halfway between maximum possible engagement into the rack and the point where gears will slip. Tighten the two screws when focus gear reaches that point.

The focus assembly will grind against the rack if engaged too deeply, and gears will slip if adjustment is too high.

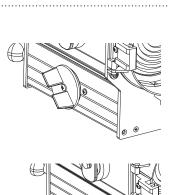

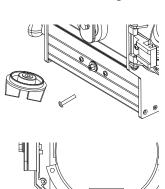

Watts	Part No.	ANSI	Color Temp.	Life (Hrs.)	
2000	176-194	BVW	2000W, 250	0 hr., 3200°K, 120V	
1500	176-193	CWZ	1500W, 325	5 hr., 3200°K, 120V	
1000	176-192	BVV	1000W, 200) hr., 3200°K, 120V	
1000	176-191	BVT	1000W, 500) hr., 3050°K, 120V	
2000	6994C		2000W, 400	hr., 3200°K, 220/240\	/
1000	T-16		1000W, 750	hr., 3050°K, 220/240\	/
1000	T-2		1000W, 200	hr., 3050°K, 220/240\	/
Recommended Lamps for 8" Television Fresnel					

2000W, 200 hr., 3200°K, 120V

1500W 300 hr 3200°K 120V

1000W, 200 hr., 3200°K, 120V

2000W, 200 hr., 3200°K, 220/240V

650W, 100 hr., 3200°K, 220/240V

ANSI

CYX

CXZ

CYV

CP41

CP39

Recommended Lamps for 8" Theater Fresnel

Accesories		
Part No.	Description	
000-A2KBD-000	Eight leaf barn door	
000-A2KCF-000	Diffusion frame	
000-A2KSS-000	Set, single, half/single scrim	
000-A00CS-000	Combo stud for flat yoke	
000-A2KTH-000	8" Top hat	

Photometric Performance

8" Theater Fresnel, Cat. No. FR2TH, with lamp No. 176-194, 2000W ANSI Code BVW

For field diameter at any distance, multiply that distance by 0.269 for spot and 1.238 for flood.

Beam Candlepower

Part

176-075

176-157

176-161

476-055/056

476-048/049

2000

1500

1000

2000

Spot 358,000 Flood 37,000

8" Television Fresnel, Cat. No. FR2TV, with lamp No. 176-075, 2000W ANSI Code CYX

For field diameter at any distance, multiply that distance by 0.265 for spot and 1.32 for flood.

Beam Candlepower

Spot	358,0
Flood	39,50
Flood	39,31


LAMP HOUSING ASSEMBLY			
Ref.	Qty.	Description	Item Number
1	1	Upper right housing	
2	1	Upper left housing	
3	1	Lower right housing	
4	1	Lower left housing	
5	1	Top housing	
6	1	Focus track	
7	1	Front cover	
8	1	Rear cover	
9	1	Standoff disk	N00-HD237-690
10	3	Rivet, 3/16" x 11/16"	N00-HD913-400
11	1	Yoke	N00-SM281-330
12	1	Washer, flat	
13	1	Bolt, hex head, 1/4-20 x 1"	
14	1	Screw, pan head, 10-24 x 1"	
15	1	Focus handle	N00-KN280-950
16	1	Washer, fibre	
17	5	Screw, pan head, 8-32 x 3/4"	
18	2	Wave washer	N00-HD223-440
19	1	Focus gear assembly	N01-SM280-570
20	13	K-lock nut, 8-32	
21	2	Screw, pan head, 10-24 x 3/4"	
22	1	Hinge	N00-HD781-900
23	30	Screw, flat head, 8-32 x 1/2"	
24	1	Ring terminal	
25	1	Green wire	
26	2	Washer, internal tooth, #8	
27	1	Strain relief	
28	1	Sleeving, 32" long	İ
29	1	Black wire	1
30	1	White wire	
31	1	Standoff disk	N00-SM237-550
32	3	Rivet, 3/16" x 7/16"	
33	1	Pressure disk	N00-SM243-380
34	1	T-bolt	N00-HD062-000
35	4	Screw, pan head, 6-32 x 3/8"	N00-HD020-800
36	1	Light shield	
37	2	K-lock nut, 10-24	
38	1	Tilt handle	N00-HD707-000
39	2	Screw, pan head, 10-24 x 2"	
70	L 4	I a .	000 40000 000

000-A00CC-000


	DOOR ASSEMBLY			
Ref.	Qty.	Description	Item Number	
40	1	Lens door assembly		
41	2	Screw, pan head, 6-32 x 1/2"		
42	1	Lock pin		
43	1	Latch handle		
44	1	Commpression spring		
45	1	Safety clip		
46	1	Retaining ring		
47	1	Knob		
48	1	K-lock nut, 6-32		
49	1	Latch		
50	1	Latch spring		
51	1	Washer, flat		
52	1	Screw, pan head, 6-32 x 1"		
53	1	8" Fresne lens	N01-LE020-110	
54	4	Lens fastener	N00-HD935-730	

PLATFORM ASSEMBLY - THEATER FRESNEL			
Ref.	Qty.	Description	Item Number
55	4	Screw, pan head, 8-32 x 3/4"	
56	1	Screw, pan head, 8-32 x 1/2"	
57	1	Lampholder platform	
58	4	Carriage assembly guide	N00-SM275-250
59	1	Cable clamp	
60	1	Mogul prefocus adapter	
61	1	Adapter brace	
62	1	Mogul prefocus socket	N01-SK020-260
63	2	Washer, flat, #10	
64	2	Screw, pan head, 10-24 x 1"	N00-HD031-320
65	1	Shield	
66	1	Reflector mount	
67	4	Rivet, 1/8" x 1/4"	
68	1	Reflector	

PLATFORM ASSEMBLY - TELEVISION FRESNEL			
Ref.	Qty.	Description	Item Number
69	1	Lampholder	N00-AS282-310

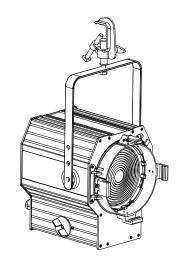

PK-93196-10-00-0F

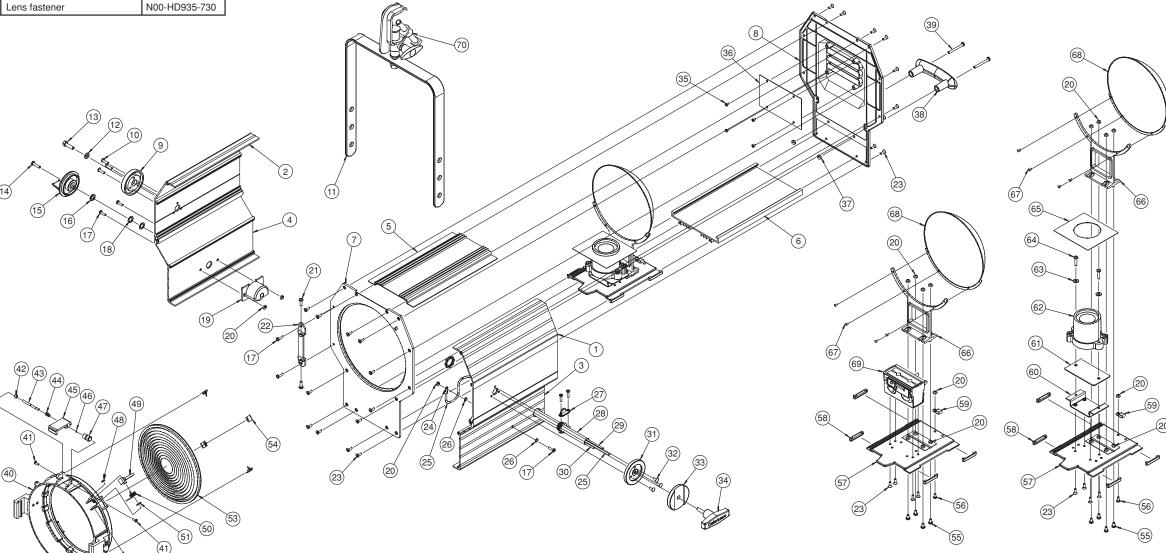

FOR CANADA ONLY

70 1 C-clamp

For warranty information and/or product returns, residents of Canada should contact Leviton in writing at Leviton Manufacturing of Canada Ltd to the attention of the Quality Assurance Department, 165 Hymus Blvd, Pointe-Claire (Quebec), Canada H9R 1E9 or by telephone at 1 800 405-5320.

LIMITED 2 YEAR WARRANTY AND EXCLUSION

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that this product at the time of its sale by Leviton is free of defects in materials and workmanship under normal and proper use for two years from the purchase date. Leviton's only obligation is to correct such defects by repair or replacement, at its option. For details visit www.leviton.com or call 1-800-824-3005. This warranty excludes and there is disclaimed liability for labor for removal of this product or reinstallation. This warranty is void if this product is installed improperly or in an improper environment, overloaded, misused, opened, abused, or altered in any manner, or is not used under normal operating conditions or not in accordance with any labels or instructions. There are no other or implied warranties of any kind, including merchantability and fitness for a particular purpose, but if any implied warranty, including merchantability and fitness for a particular purpose, is limited to two years. Leviton is not liable for incidental, indirect, special, or consequential damages, including without limitation, damage to, or loss of use of, any equipment, lost sales or profits or delay or failure to perform this warranty obligation. The remedies provided herein are the exclusive remedies under this warranty, whether based on contract, tort or otherwise.