

INSTALLATION

WARNINGS AND CAUTIONS:

- TO BE INSTALLED AND/OR USED IN ACCORDANCE WITH ELECTRICAL CODES AND REGULATIONS.
- IF YOU ARE NOT SURE ABOUT ANY PART OF THESE INSTRUCTIONS, CONSULT AN ELECTRICIAN.
- TO BE USED FOR INDOOR APPLICATIONS ONLY(10-30°C ENVIRONMENTS).
- DO NOT EXPOSE THIS DEVICE TO DIRECT SUNLIGHT. IT IS INTENDED FOR INDOOR USE ONLY, WITH OPERATIONAL LIGHTING REQUIREMENTS FROM 4 TO 100 FOOT CANDLES (1000 LUX) DO NOT EXPOSE THIS DEVICE TO CONDITIONS IN EXCESS OF 100 FC (10,000 LUX).

DESCRIPTION:

The Wireless Light Sensor is a solar powered & battery-free wireless transmitter that communicates with a wide variety of receivers. The Light Sensor is used to adjust artificial light when enough natural light is available in order to help facility managers to conserve energy and shave utility costs. Energy is harvested from the light captured by the solar cells on the Light Sensor. This energy is used by a built-in transmitter to send wireless signals every 60 seconds (+/-) to command a designated receiver to control lighting level. A switch can also be added to control the lights.

COMPATIBLE DEVICES:

- 3-Wire Relay
- 5-Wire Relay
- E3X-BACFP Central Controller
- More receivers available



EQUIPMENT NEEDED FOR INSTALLATION

- Non conductive stylus, or ballpoint pen
- Screwdriver
- Double Sided Foam Mounting Tape
- Wall Anchors and Screws (Anchors Not included - for "screw to" mounting)

PROGRAMMING AND ACTIVATION:

1. **Do not mount the sensor until after it has been programmed** to communicate with all appropriate receivers.
2. **Make sure the sensor is within 15 feet (5 meters) of the desired receiver when programming.**
3. **Programming:** To associate a sensor with a receiver, press the Teach button (center button on front cover) on the Wireless Light Sensor while the receiver is in the desired Program Mode (see receiver instructions for programming).

4. **Activation:** The Light Sensor can operate in one of two modes, ON/OFF Mode or Light Level Mode.
 - ON/OFF mode is used to control relays and other switching devices.
 - Light Level Mode is used to control the light level of dimming devices. The Light Sensor transmits the light level every 60 seconds (+/-), depending on the light level. The dimming device can use this information to adjust brightness.

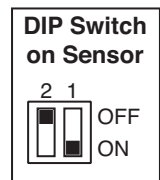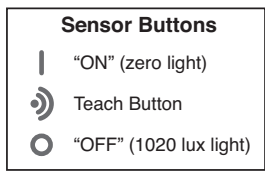

Use the DIP switch on the back of the Light Sensor to set the mode. DIP switch number 1 in the ON position is the ON/OFF Mode, and in the OFF position is Light Level Mode.

Note: DIP switch 2 is a placeholder for future use. Choose which mode you want to operate in and set the DIP switch accordingly.

PLEASE NOTE: Do not attempt to activate loads while receivers are in Program Mode or other devices could be accidentally added or deleted from memory. Receivers have reduced range during programming. Wireless Light Sensor start up time is 2-4 minutes out of the box depending on light source (keep this in mind while considering mounting location). Wireless Light Sensor Self Powered light requirements are approximately 20 foot candles for 3 hours every 24 hours (keep this in mind while considering mounting location). If these requirements cannot be met, consider utilizing battery backup feature located underneath the sensor as the power source for your application.

5. Once the Light Sensor has been programmed to a receiver, set the desired light level using the adjustment on the Light Sensor.

- Note:** When using ON/OFF mode, the light level adjustment can be made in one of two ways.
1. By looking at the graph in the installation guide, adjust the potentiometer to the position corresponding to the light levels desired. For example, if you want the lights to turn ON at 40 LUX and OFF at 100 LUX, turn the potentiometer fully counter-clockwise (to the left). For a turn ON level at 408 LUX and a turn OFF level at 1020 LUX, turn the potentiometer fully clockwise (to the right).
 2. Press and hold the "Teach" button for about 7 seconds. The sensor will switch into a mode where it does not transmit radio messages, but rather blinks the LED briefly to indicate whether the light level is above the "turn OFF" threshold or below the threshold. One blink for "below" and two blinks for "above." After 30 seconds the sensor will automatically time out, returning to normal operation. While in this mode, use a screwdriver to adjust the potentiometer to set The desired light level. Note that it is helpful to have the light level in the room adjusted, by adjusting the window blinds (or similar means), so the light level matches the desired "turn ON" level.

Note: The presence of a person near the sensor will affect the light reading, and depending on room light and the color of the person's clothing, the reading may be either higher or lower. Remember when adjusting the sensor that transmissions occur relatively slowly.

FUNCTIONALITY:

Transmit Interval:

The Light Sensor transmits every 30 seconds in the presence of very bright light (several hundred lux or more). An abundance of light allows for more energy to transmit, so transmissions occur more often. Also, when it is lighter, generally it is likely that people are present, and the system will respond more quickly with more frequent transmissions. The sensor wakes up every few seconds to measure the light when there is an abundance of light available. If the light level changes quickly, the sensor may transmit within a few seconds of the change. If the light continues to fluctuate, however, the sensor will not continue transmitting every change of light level. The FCC limits the number of transmissions per hour. In lower light levels, the transmission rate slows down, and when in darkness (or near it) transmissions only occur every 15 minutes. At this slow rate, the sensor only wakes up to check the room light level every 90 seconds. This conserves energy but still provides data to wireless receivers often enough to maintain system integrity.

Light Level Sensing:

See specifications table for minimum and maximum operating light levels. The light level seen by a sensor on the ceiling of a typical office may be in the range of 120 to 200 lux. The light on the work surfaces is generally higher than this.

The Light Sensor operates wirelessly and battery free as long as the device receives at least 200 lux for 3 hours a day (or less light for a longer time period each day). It is recommended to initially charge the internal energy storage by placing the sensor in bright light (1000 lux or more) under a desk lamp or similar for several hours. If the device is not pre-charged in this manner, the sensor will not operate in darkness for several days or more (depending on ambient light level).

Backup Battery:

An internal battery option is available to operate in dark environments. The battery is a 1/2 AA 3.6V long-life lithium battery. When light is present, the battery is not used, making the life mostly dependent on the self-discharge characteristics of the battery. In darkness, the sensor requires less than 10 microamps of current. For a 1000 mA-hour 3.6 V lithium battery, this equates to a 100,000 hour life, or about 10 years. However, the battery self-discharge reduces this life, and the self-discharge rate depends on battery brand, temperature, and other factors. Two wiring connections are provided for external power sources. The wires accept either AC or DC power from 8 to 30 VAC or VDC.

Buttons:


The Center button, with a radio wave symbol, transmits a "Teach" telegram (radio signal) so receivers can teach, or associate with, the Light Sensor. The "I" button (capital I) sends a message that no light is present (0 foot candles/lux), so if the controller is designed to do so, the lights will turn ON. The "O" button (capital O, not zero) sends a message that 1020 lux (or more) of light is present, so the controller (generally) will turn the lights OFF. The I and O buttons are for testing the system. Pressing the buttons too often or too rapidly may deplete the energy storage when not fully charged.

External Antenna:

When greater range is desired (than is possible with the internal antenna) the antenna can be routed externally through the hole in the side of the enclosure and for best appearance can be placed in the antenna sheath. When mounting the sensor on or near metal, the external option is highly recommended. In general it will always increase range, so unless the external antenna creates aesthetic issues, it is recommended to use it. The antenna can also exit the wall plate up into ceiling cavities.

Adjustment Tool:

The small plastic screwdriver is used for adjusting the sensor level, when used in the ON/OFF mode. When the sensor has the first DIP switch (inside the back cover) turned OFF, the sensor will transmit the actual measured light level (0 to 1020 lux). Some controllers do not have knobs or other adjustments to set the desired room light level, so another mode is provided. The sensor ships, by default, with the first DIP switch in the "ON" position. In this mode the sensor will only transmit a level of 0 lux or 1020 lux. If the light detected by the sensor is below the lower threshold (see graph) the light sensor transmits a "0 lux" message (even though the actual measured light is not zero, it allows the controller to look for a simple ON/OFF message) causing the lights to turn ON. When the light detected by the sensor is above the upper threshold, the sensor transmits a "1020 lux" message, causing the room lights to turn OFF. In between the two thresholds is a deadband, an area where the sensor transmits no messages. Without this deadband, the lights could cycle ON and OFF when the room light is near the threshold level. For example, if the adjustment knob is at its lowest (counterclockwise) position, and it detects a light level greater than 100 lux, it will send a "1020 lux" message, turning the lights OFF. If the sensor detects a level between 40 lux and 100 lux, it will not transmit, leaving the lights unchanged. If it detects a light level below 40 lux, it will send a "0 lux" message, turning the lights ON. If the adjustment knob were at the highest (clockwise) position, the sensor would not turn the lights ON until the sensor measures 408 lux or more. Location of the Light Sensor is important. Amount of artificial and natural light seen by the sensor needs to be taken into account in adjusting to reach desired results.

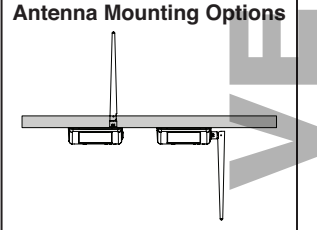


SPECIFICATIONS	
WSCPC	
F.O.V.	60 Degree Cone
Range	20-150 feet (Typical)
Transmission Interval	10 seconds (plus/minus)
Minimum Light Required	4FC (40 LUX)
Solar Cell Operating Range	2-1000FC (20-10,000 LUX)
Measurement Range	0-100 FC (0-1000 LUX)
Minimum Charge Time to Begin Operation	1 minute @ 20FC (200 LUX)
Maximum Charge Time	24 hours @ 100FC (1000 LUX)
Maintain Charge Time	3 hours per 24 hours @ 20FC
Operating Life at Full Charge	72 hours
Optional Battery Life	10 years
Operating Temperature Range	32°F to 104°F (0°C to 40°C)
Storage Temperature Range	-4°F to 158°F (-20°C to 70°C)
Relative Humidity	0% to 95%, non-condensing
Usage	Indoors only
Mounting Height	8-12 feet
Dimensions	3.14(W) x 3.69(H) x 1.03(D)
Power Supply	Solar Powered, Battery for backup (not required)*
Channels	1 Channel
Output Channels	Only limited by number of receivers in range
Addressing	Factory set unique ID (1 of 4 billion)
Radio Certification	FCC (United States) Pending I.C. (Canada) Pending


*Optional Battery - 1/2 AA, 3.6v Lithium

WEB VERSION

OPTIONAL EXTERNAL CONNECTIONS

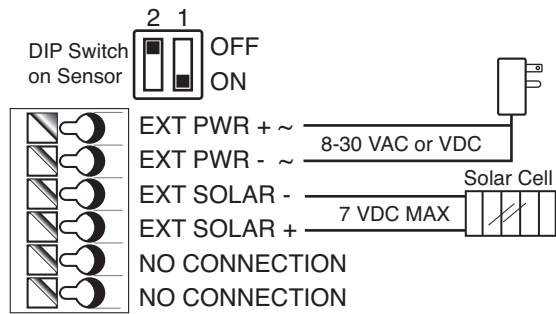

SWITCHING GRAPH

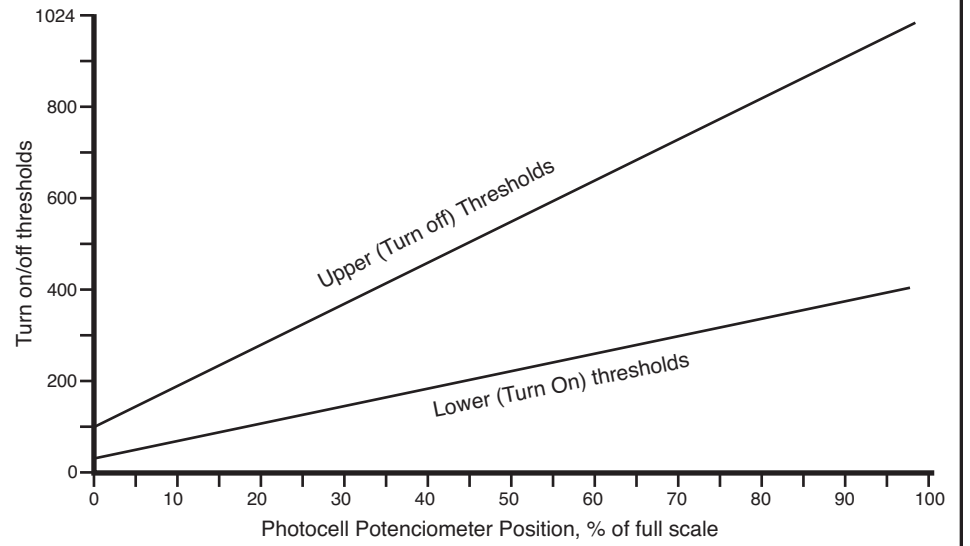




INSTALLATION

Wireless Light Sensors can be mounted using screws or adhesive foam.

SCREW TO SURFACE MOUNT:

1. Select location for mounting of sensor. If necessary, drill pilot holes into the mounting surface.
2. Remove the back cover of the sensor with slotted screwdriver.
3. Install back cover of the light sensor to desired location using screws, nuts and washers, or screws in combination with commercially available wall anchors.
4. Secure the sensor body to the back cover by pressing firmly until locked.

SCREW TO SURFACE MOUNT

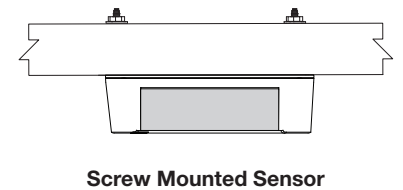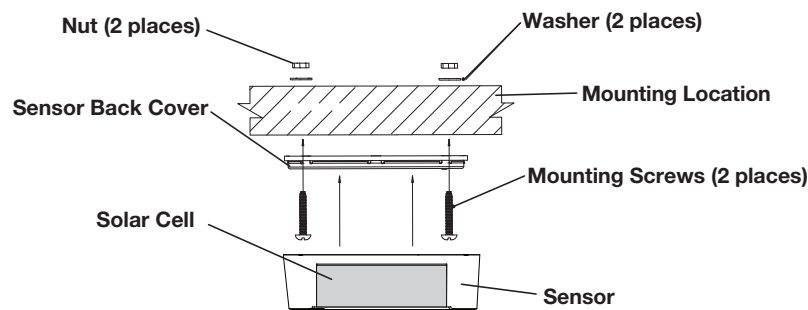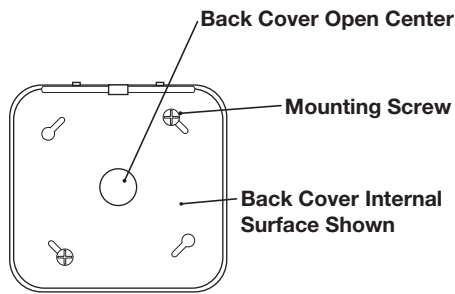

ADHESIVE SURFACE MOUNT:

1. Remove backing material and apply double sided mounting tape to the Sensor Base.
2. Press and hold the Wireless Light Sensor to the desired mounting surface for a few seconds before releasing.

TESTING:

1. Assure device pairing is properly completed.
2. Verify load on/off function occurs accurately.
3. Press the learn button to temporarily increase the rate of measurements and transforms to test load operation.

TROUBLESHOOTING :

1. Verify that the LED blinks when the "I" or "O" button is pressed. When the "I" button is pressed, the receivers should turn the lights ON and the "O" should turn the lights OFF (there may be delay timers in the receiver, so the change may not happen immediately).

FCC COMPLIANCE STATEMENT:

FCC ID: PENDING
 IC: PENDING
 The enclosed device complies with Part 15 of the FCC Rules.
 Operation is subject to the following two conditions:
 (i.) This device may not cause harmful interference
 (ii.) This device must accept any interference received, including interference that may cause undesired operation.
 Any changes or modifications not expressly approved by Leviton could void the user's authority to operate this equipment.

These products are covered by one or more U.S. & Foreign Patents and Patents Pending
 Copyright © 2010 Leviton Manufacturing Co., Inc.
 All rights Including Trade Dress Rights Reserved

Leviton is a registered trademark of Leviton Mfg. Co. in the United States, Canada, Mexico, and other countries. Other trademarks herein are the property of their respective owners.

LIMITED 5 YEAR WARRANTY AND EXCLUSIONS

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that this product at the time of its sale by Leviton is free of defects in materials and workmanship under normal and proper use for five years from the purchase date. Leviton's only obligation is to correct such defects by repair or replacement, at its option, if within such five year period the product is returned prepaid, with proof of purchase date, and a description of the problem to **Leviton Manufacturing Co., Inc., Att: Quality Assurance Department, 201 North Service Road, Melville, New York 11747**. This warranty excludes and there is disclaimed liability for labor for removal of this product or reinstallation. This warranty is void if this product is installed improperly or in an improper environment, overloaded, misused, opened, abused, or altered in any manner, or is not used under normal operating conditions or not in accordance with any labels or instructions. **There are no other or implied warranties of any kind, including merchantability and fitness for a particular purpose, but if any implied warranty is required by the applicable jurisdiction, the duration of any such implied warranty, including merchantability and fitness for a particular purpose, is limited to five years. Leviton is not liable for incidental, indirect, special, or consequential damages, including without limitation, damage to, or loss of use of, any equipment, lost sales or profits or delay or failure to perform this warranty obligation.** The remedies provided herein are the exclusive remedies under this warranty, whether based on contract, tort or otherwise.

For Technical Assistance Call: 1-800-824-3005 (U.S.A. Only)
www.leviton.com