

Ambient light level

Low

Tap the top button

on the switch

base 1 time.

The status LED

will slowly flash

GREEN to show

the selection.

Status LED configuration

Status LED ON when load

is ON

Tap the top button on the

switch base 1 time.

The status LED will slowly flash GREEN to show

the selection.

Motion indicator light

Enabled (default)

Tap the top button on the switch

base 1 time. The status LED will slowly flash GREEN to show

the selection.

Factory default reset

12. What to do if...

ambient light settings.

Lights always stay ON:

the module.

13. Safety first

For indoor use only.

the back of a module.

warranty, call 1-800-824-3005.

telephone at 1-800-405-5320. **FCC COMPLIANCE STATEMENT**

FOR CANADA ONLY

following measures:

FCC CAUTION

undesired operation.

operation of the device.

Leviton Manufacturing Co., Inc.

DI-000-VMOS1-00A-M

201 North Service Road, Melville, NY 11747

© 2024 Leviton Manufacturing Co., Inc. All rights reserved.

Specifications subject to change at any time without notice.

PATENT STATEMENT

IC STATEMENT

receiver is connected.

Reorient or relocate the receiving antenna.

CAUTIONS:

transformer-operated appliance.

packaging and in these instructions.

WARNINGS:

There is no power going to the module:

Confirm the WHITE conductor is a neutral.

Make sure you are in occupancy mode.

OFF after no motion is detected.

Make sure you are in occupancy mode.

My lights work, but they are flickering:

The module won't insert into the base:

Lights do not turn ON when motion is detected:

motion from an adjacent area (e.g., hallway traffic).

neutral wire are connected to the light fixture.

• Ensure that the blades on the module are not bent).

1. Hold the setup button for a total of 14 seconds.

2. Release the setup button and the module will reset.

Confirm that the switch has the neutral and line wired.

When power is applied, the light is OFF and does not respond:

Motion may be beyond sensing range. Move closer to the device.

11.

While the occupancy mode, select your room's target light level. If the ambient light in the

Enter **Setup Mode**.

Tap the setup button 4 times. The status LED will quickly flash RED/GREEN/AMBER.

Press the setup button once to confirm the selection and return to setup mode. The status LED will quickly flash GREEN.

Enter Setup Mode.

Tap the setup button 5 times. The status LED will quickly flash RED/GREEN.

Status LED ON when load

is OFF (default)

Tap the top button on the

switch base 2 times.

The status LED will slowly

flash AMBER to show

the selection.

Press the setup button once to confirm the selection and return to setup mode.

The status LED will quickly flash GREEN.

Enter **Setup Mode**.

Tap the setup button 6 times. The status LED will quickly flash RED.

Press the setup button once to confirm the selection and return to setup mode.

The status LED will quickly flash GREEN.

After the first 7 seconds, the status LED turns AMBER. Continue to hold.

After a total of 14 seconds, the status LED quickly flashes RED/AMBER.

Confirm the base is wired properly, and the WHITE conductor is a neutral wire.

For proper operation, the base needs a line (hot), neutral, load, and ground connection.

• Use setup mode to increase the sensor's sensitivity and coverage area, or adjust the

Check settings for how long the Motion Sensor Module waits before turning the lights

Check that the Motion Sensor Module is not installed near a heat source or detecting

Unscrew the light bulb and test with a voltage tester to make sure a line (hot) and

Check the compatibility marking on the base to make sure it matches the marking on

Visit leviton.com/evolve or contact Technical Services for additional help.

 TO AVOID FIRE, PERSONAL INJURY OR PROPERTY DAMAGE, DO NOT install to control a receptacle, a load in excess of the specified rating, or a motor or

Single-Pole switch base, Primary switch base, or Companion switch base.

This is not a toy and is not intended for use by children. For adult use only.

• To be installed and/or used in accordance with electrical codes and regulations.

If you are unsure about any part of these instructions, consult an electrician.

• RISK OF FIRE OR ELECTRIC SHOCK. For use with Leviton Decora Evolve bases only.

The Decora Evolve VMOS1 Motion Sensor Module must be installed in a Decora Evolve

• Do not use this separable device with any product other than the one specified on the

To avoid damage to the product, DO NOT use disinfecting products, including foggers,

For Leviton's limited product warranty, go to www.leviton.com. For a printed copy of the

For warranty information and/or product returns, residents of Canada should contact Leviton in writing at Leviton Manufacturing of Canada ULC to the attention of the Quality Assurance Department, 165 Hymus Blvd, Pointe-Claire (Quebec), Canada H9R 1E9 or by

This equipment has been tested and found to comply with the limits for a Class B

the user is encouraged to try to correct the interference by one or more of the

Connect the equipment into an outlet on a circuit different from that to which the

Model VMOS1 – Decora Evolve Motion Sensor Module is manufactured by Leviton Manufacturing Co., Inc. 201 N. Service Road, Melville, NY 11747. www.leviton.com

must accept any interference received, including interference that may cause

Patents covering this product, if any, can be found on Leviton.com/patents

without the express written permission of Leviton Manufacturing Co., Inc.

Any changes or modifications not expressly approved by Leviton Manufacturing Co., Inc.,

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired

Decora and Decora Evolve are the trademarks of Leviton Manufacturing Co., Inc.; Decora is

Use herein of other third party trademarks, service marks, trade names, brand names and/or product names are for informational purposes only, are/may be the trademarks of their respective owners; such use is not meant to imply affiliation, sponsorship, or endorsement. No part of this document may be reproduced, transmitted or transcribed

Increase the separation between the equipment and receiver.

could void the user's authority to operate the equipment.

FCC SUPPLIER'S DECLARATION OF CONFORMITY

COPYRIGHT AND TRADEMARK INFORMATION

registered in the U.S., Canada, Mexico and China.

Consult the dealer or an experienced radio/TV technician for help.

reasonable protection against harmful interference in a residential installation. This

digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide

equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

Save this instruction sheet. It contains important technical data with testing and

troubleshooting information, which will be useful after installation.

14. Limited 2 year warranty & exclusions

sprays or other types of atomized cleaning agents. DO NOT spray liquid onto the product. To clean, use a damp cloth with mild soap and dry well. DO NOT use a wet cloth to clean

When enabled, blinks RED for one second when motion is detected.

High

Tap the top button

on the switch

base 3 times.

The status LED will slowly flash

RED to show the

selection.

Disabled

(default)

Tap the top button

on the switch

base 4 times. The

status LED will

slowly flash RED/

AMBER to show

the selection.

Status LED OFF

Tap the top button on the switch base 3 times.

The status LED will slowly

flash RED to show

the selection.

DisabledTap the top button on the switch base

2 times. The status LED will slowly

flash AMBER to show the selection.

Return to top

Return to top

Return to top

room is brighter than the level selected, the lights will not turn ON.

Medium

Tap the top button

on the switch

base 2 times.

The status LED

will slowly flash

AMBER to show

the selection.

Follow the steps below to change the functionality of the status LED.

MOBILE VERSION

11. Factory default reset

Installation Instructions

Motion Sensor Module

Cat. No. VMOS1

READ THESE INSTRUCTIONS BEFORE INSTALLING.

Motion sensing

Installation Steps

Meet the family