

**MESSAGE**

Show a Message	8 MASTER CODE 1 Message #
Log a Message	8 MASTER CODE 2 Message #
Clear a Message	8 MASTER CODE 3 Message #
Say a Message	8 MASTER CODE 4 Message #
Phone a Message	8 MASTER CODE 5 Phone number Message # (1-8)

**VIEW STATUS AND PROGRAMS**

View Unit Status	6 1 ↑/↓
View Zone Status	6 2 ↑/↓
View Time of Sunrise/Sunset	6 3
View Every Program	9 MASTER CODE 3 2 # ↑/↓

**TELEPHONE ACCESS**

USE KEYPAD ON TONE-TYPE TELEPHONE	
To Access system	From inside, pick up a phone & press # : ----- From an outside phone, call your house and enter our code after the beep. If you have an answering machine, let the phone ring once, hang up and wait about 10 seconds, then call back. System will answer after one ring. Enter your code.
Panic (Inside Phone Only)	Press # 6 times. Sirens and lights are activated.

**COMMANDS VIA TELEPHONE**

Control	1 Unit Number # Then 0 Off 2 Dimmer Press 1 On 3 Brighter
Security	2 Then 0 Off 4 Vacation Press 1 Day 5 Day Inst CODE 2 Night 6 Night Dly 3 Away
Bypass a Zone	2 8 Zone Number # CODE
Restore All Zones	2 9 0 # CODE
Run a Button	3 Button Number #
All Lights On	4 1 All Off 4 0
Temperature	5 Temp Zone # Then 1 Mode 4 Fan Press 2 Heat 5 Hold 3 Cool
Status	6 Reads Current Status of System
Events	7 CODE Reads 3 events. Press 7 for more events or * to quit.
Play and Record Address	8 8 To play address 8 9 CODE - Record Address
Talk and Listen to Premises	8 3 2 Talk 8 8 Listen
Goodbye	9 Or hang up phone
Cancel	*
Repeat	0

**OmniPro II, Omni IIe,  
and OmniLTe.**

**Quick Reference Command Summary**

Refer to Owner's Manual for complete instructions.

## CONSOLE DISPLAYS

All system commands are menu based. For the main menu, press **#** :

1=CONTROL	2=SECURITY
3=BUTTON	4=ALL

Press **↓** for the next display:

5=TEMP	6=STATUS
7=EVENTS	8=MESSAGE

9=SETUP
---------

Press **↓** when entering a unit, zone, button, temperature, code, or message to scroll through the list of names.

Press **↓** to advance to the next item.

Press **↑** to go back to the previous item.

## CONSOLE FUNCTIONS

*	Used to cancel and return the display to the previous menu.
#	Used to enter / confirm a selection or to display a menu.
1 Beep	Your command has been properly entered.
2 Beeps	Trouble Beeps. Press * to silence beeper.
3 Beeps	Error! Please reenter command. Press * to start over.
Beeper on Continuously	An alarm has occurred.

## SECURITY

Disarm System & Silence Alarms	<b>OFF</b> CODE
Arm Security	<b>AWAY</b> OR <b>NIGHT</b> OR <b>DAY</b> CODE Be sure display reads "SYSTEM OK"
Arm Security to Vacation Mode	<b>2</b> <b>4</b> CODE
Bypass a Zone	<b>2</b> <b>8</b> ZONE <b>#</b> CODE
Restore all Zones	<b>2</b> <b>9</b> <b>0</b> <b>#</b>
Quick Arm	<b>AWAY</b> OR <b>NIGHT</b> OR <b>DAY</b> TWICE
Review Events	<b>7</b> MASTER CODE <b>↑/↓</b>
Reset Smoke Detectors	Arm or Quick Arm
Emergency Keys	<b>1</b> + <b>3</b> = POLICE EMERGENCY <b>4</b> + <b>6</b> = FIRE EMERGENCY <b>7</b> + <b>9</b> = AUXILIARY EMERGENCY Alarm is activated with the simultaneous depression of two keys for 1 second.

## SETUP ITEMS

Set Time (e.g. 7:30 PM) Enter Date (e.g. April 15, 00)	<b>9</b> MASTER CODE <b>2</b> <b>7</b> <b>3</b> <b>0</b> <b>↓</b> <b>0</b> <b>4</b> <b>1</b> <b>5</b> <b>0</b> <b>0</b>
Set New Codes	<b>9</b> MASTER CODE <b>1</b> Press <b>↓</b> or <b>↑</b> to display each item.
Set Phone Options	<b>9</b> MASTER CODE <b>4</b> To change an item, enter your choice then press <b>#</b> .
Set Delays and Arming Options	<b>9</b> MASTER CODE <b>5</b>

## LIGHTING AND TEMPERATURE

All lights On	<b>4</b> <b>1</b>	All Off	<b>4</b> <b>0</b>
Turn a Light On or Off	<b>1</b> Unit <b>#</b> <b>1</b> OR <b>0</b> (ON) (OFF)		
Dim a Light	<b>1</b> Unit <b>#</b> <b>2</b> Steps Dimmer (1-9)		
Brighten a Light	<b>1</b> Unit <b>#</b> <b>3</b> Steps Dimmer (1-9)		
Timed Command	<b>1</b> Unit <b>#</b> <b>9</b> Enter time <b>#</b> <b>0</b> OR <b>1</b> OR <b>2</b> OR <b>3</b> (OFF) (ON) (DIM) (BRT)		
Set Lighting Level	<b>1</b> Unit <b>#</b> <b>4</b> Lighting Level (1-100)		
Run a Button (Macro)	<b>3</b> Button <b>#</b>		
Run a Scene	<b>4</b> <b>2</b> Scene <b>#</b>		
View Temperature Settings	<b>5</b> Temp Zone <b>#</b> <b>#</b> <b>↑/↓</b>		
Change Thermostat Mode	<b>5</b> Temp Zone <b>#</b> <b>1</b> 0 Off 2 Cool 1 Heat 3 Auto		
Change Thermostat Heat Setting (Set to 70)	<b>5</b> Temp Zone <b>#</b> <b>2</b> <b>7</b> <b>0</b> <b>#</b>		
Change Thermostat Cool Setting (Set to 80)	<b>5</b> Temp Zone <b>#</b> <b>3</b> <b>8</b> <b>0</b> <b>#</b>		
Change Thermostat Fan Setting	<b>5</b> Temp Zone <b>#</b> <b>4</b> 0 Auto 1 ON 2 Cycle		
Change Thermostat Hold Setting	<b>5</b> Temp Zone <b>#</b> <b>5</b> 0 Auto 1 ON		