


The information in this document is the exclusive PROPRIETARY property of LEVITON MANUFACTURING COMPANY, INC. It is disclosed with the understanding that acceptance or review by the recipient constitutes an undertaking by the recipient: (1) to hold this information in strict confidence, and (2) not to disclose, duplicate, copy, or use the information, in whole or in part, for any purpose other than that for which disclosed. This document is loaned subject to return upon demand.


Copyright ©2002 Leviton Mfg. Co. Inc. Unpublished. All Rights Reserved.

DRAWING INTERPRETATION PER ASME Y14.5 1994




THIRD ANGLE PROJECTION

D8000 Entry Station Installation Instructions

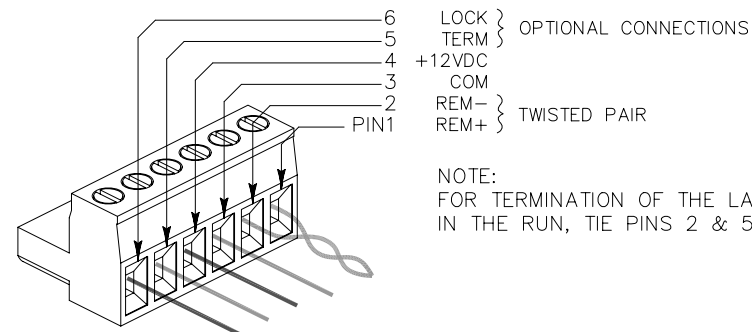



NOTE:
FOR TERMINATION OF THE LAST DEVICE
IN THE RUN, TIE PINS 2 & 5 TOGETHER.

STEP 1 LOCATE FEMALE CONNECTOR PROVIDED AND TERMINATE WIRES AS SHOWN.

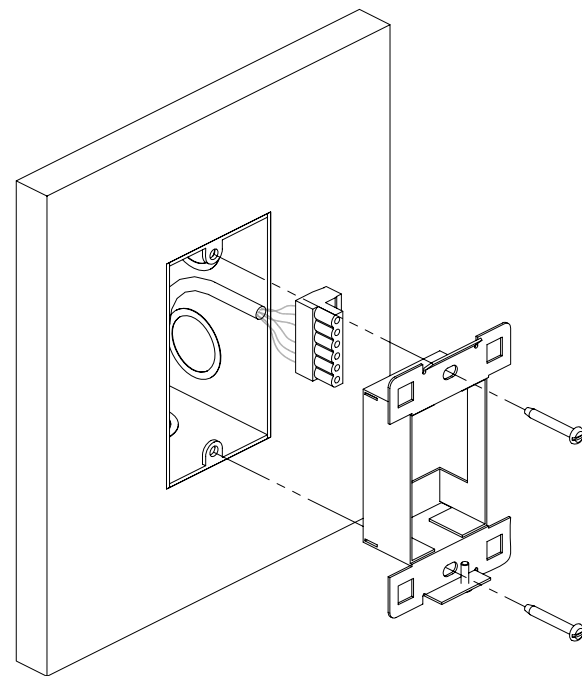

STEP 2 INSERT THE WIRED CONNECTOR THROUGH THE HOLE IN THE BACK OF THE WALL STRAP. ATTACH THE WALL STRAP TO THE ELECTRICAL BOX AS SHOWN, USING (2) 6-32 X 1" SCREWS PROVIDED.


STEP 3 PLUG CONNECTOR ONTO BACK OF THE BUTTON ASSEMBLY AS SHOWN. PUSH THE WIRE INTO THE WIRE WAY IN BETWEEN THE SHROUD AND THE BACK OF THE WALL BOX. ENSURE THE CORRECT LUMA-NET ID DIP-SWITCH SETTING PRIOR TO INSTALLATION.

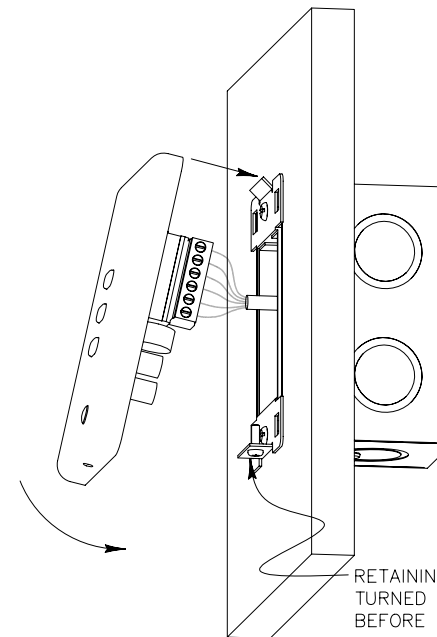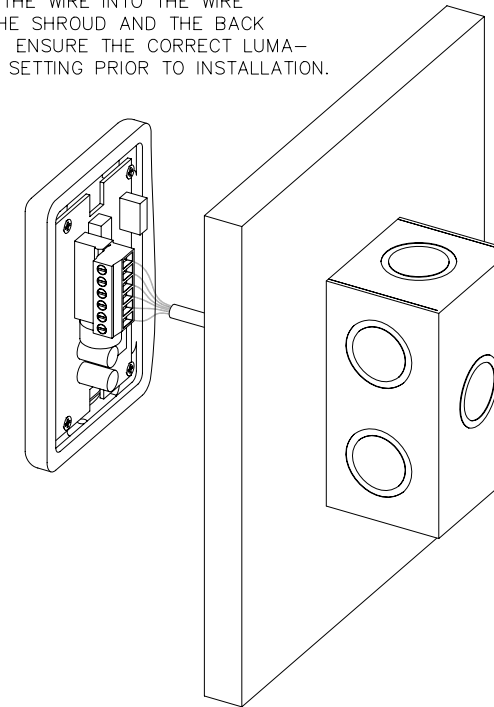

RETAINING SCREW SHOULD BE TURNED ALL THE WAY IN (CLOCK-WISE) BEFORE WALL PLATE IS SET INTO PLACE.

STEP 4 HOOK THE TOP OF THE WALL PLATE OVER THE ANGLED TAB ON THE WALL STRAP, AND ROTATE THE ASSEMBLY BACK INTO PLACE.

RETAINING SCREW ACCESS HOLE

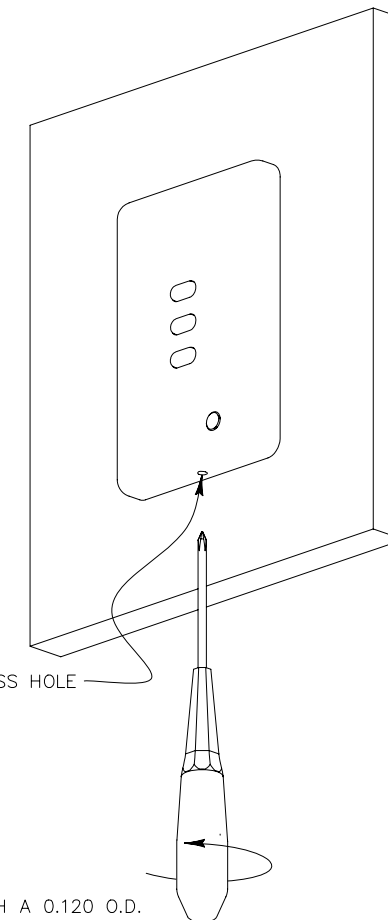

STEP 5 USE A #1 PHILLIPS SCREWDRIVER WITH A 0.120 O.D. TO SEAT THE RETAINING SCREW INTO THE SLOT ON THE INSIDE OF THE WALL PLATE BY TURNING IT COUNTER CLOCKWISE. SCREW SHOULD BE TURNED OUT ONLY UNTIL SNUG.