

Getting Started Guide



**MINI PLUG-IN SWITCH
2ND GEN**

PLEASE READ THESE INSTRUCTIONS
BEFORE INSTALLING



See the complete line of My Leviton™ app compatible dimmers, switches, plug-ins, and controllers at leviton.com/decorasmart

1



Welcome



Leviton's second-generation Decora Smart Wi-Fi Mini Plug-In Switch makes it easier than ever to control plug-in lamps, electronics, and small appliances. Connect to your smart home platform of choice - works with Matter, Amazon Alexa, Google Home, Apple Home/Siri, and more. Use your voice for control or use your mobile device with the My Leviton app even when you're away from home.

Built-in scheduling lets you turn devices on or off at specific times and a convenient push button provides manual control. Combine your Mini Plug-In with other Decora Smart Wi-Fi devices to create a Whole Home experience with room scenes and activities to match your lifestyle.

We are here to help

- ONLINE**
decorasmartsupport.leviton.com
- CHAT**
www.leviton.com/support
- EMAIL**
dssupport@leviton.com
- CALL**
1-800-824-3005 (USA)
1-800-405-5320 (Canada)

2



Your Mini Plug-In Switch works with:



- General purpose loads up to 15 amps, for specific ratings see the chart below.
- Additional self-service support options can be found in the My Leviton app or at leviton.com/decorasmart.


RATINGS	
General Use	15A, 120VAC, 60Hz
LED / CFL / Electronic Ballast	5A
Incandescent / Halogen	1500W
Magnetic Ballast	15A
Motor	3/4 HP
Operating Temp	0°C - 40°C (32°F - 104°F)
Operating Humidity	10 - 90% non-condensing
NETWORK	
Wi-Fi	802.11 b/g/n networks - 2.4GHz only
Security	WPA, WPA2, or WPA3 security, or open
Bluetooth	v5.0
MY LEVITON APP	
iOS	version 12.0 or later
Android™	version 8.0 or later

3




Features

Status LED/
Control Button

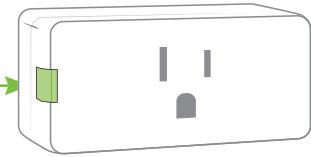

- Shows network connectivity.
- Allows you to turn ON/OFF manually.

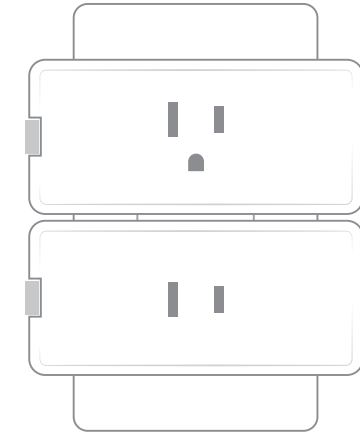

The size allows two mini plug-ins to be plugged into the same receptacle.

4




What you need to make it work:

- A 2.4 GHz Wi-Fi network with high speed internet.
- An iOS (12.0 or later) or Android™ (8.0 or later) mobile device.
NOTE: Make sure Wi-Fi and Bluetooth are enabled on your mobile device.
- A My Leviton account, if connecting using the My Leviton App.
- A Matter controller or hub if connecting using Matter.



Quick tip

You can pair a wireless Anywhere Switch Companion (DAWSC) to your Mini Plug-In Switch to add wall mount control of plug loads (see page 12). Learn more at leviton.com/decorasmart or see the DAWSC Anywhere Switch Companion instructions for connection directions.

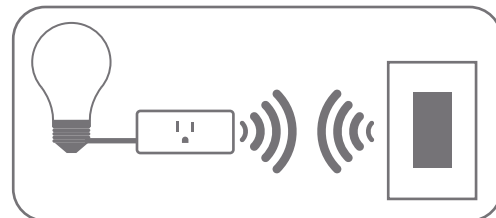


5




Installation

- Insert plug-in switch into any 120VAC receptacle.

NOTE: Your Mini Plug-In Switch works with GFCI and AFCI protected receptacles. Do not use in a switched outlet.

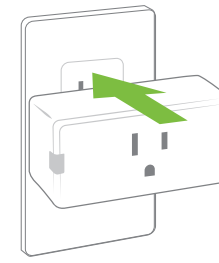

- When device first powers up, the Status LED/button will flash GREEN to show it is ready to be configured.

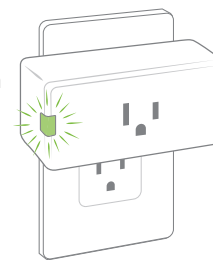

- Using a smartphone or tablet, confirm a strong Wi-Fi signal is available in the area in which you are installing your plug-in.



6



Device setup

- Your Decora Smart Wi-Fi 2nd Gen device can be connected to the My Leviton cloud (see page 8), to Matter using a compatible Matter controller or Hub (see page 11), or to both.
- For voice control with Amazon Alexa, you can set up your device with My Leviton and link your Amazon Account, or you can use Matter to set it up directly in the Amazon Alexa app if you have a compatible Amazon device.
- For voice control with Google Assistant-enabled devices, you can set up your device with My Leviton and link your Google Account, or you can use Matter to set it up directly in the Google Home app if you have a compatible Google device.
- For voice control with Siri, use Matter to set up your device directly in the Apple Home app; this Matter-certified accessory requires an Apple Home hub such as HomePod or Apple TV running the latest software.
- For use with Samsung SmartThings, use Matter to set up your device in the SmartThings app and connect to a compatible SmartThings Hub.



7



Get the app

To download the app, visit my.leviton.com and select the link or scan the QR code below for your device.



Add your device to My Leviton

- Make sure the device is in setup mode (status LED should be blinking GREEN). If the status LED is not blinking GREEN, see page 15 for instructions on how to put the device in setup mode.
- Launch the My Leviton app.
- Log in or choose "Sign Up" for an Account.
- Follow the instructions on the screen.
- Once logged in, tap the "+" in the upper-right corner of the devices page and select "Add Device".
- Follow the app instructions to add your device and connect it to your home Wi-Fi network.

8

If you need help...

ONLINE
decorasmartsupport.leviton.com

CHAT
www.leviton.com/support

EMAIL
dssupport@leviton.com

CALL
1-800-824-3005 (USA)
1-800-405-5320 (Canada)


Leviton Manufacturing Co., Inc.
201 North Service Road, Melville, NY 11747

© 2023 Leviton Manufacturing Co., Inc. All rights reserved.


Specifications subject to change at any time without notice.

WEB VERSION

Plug in your device

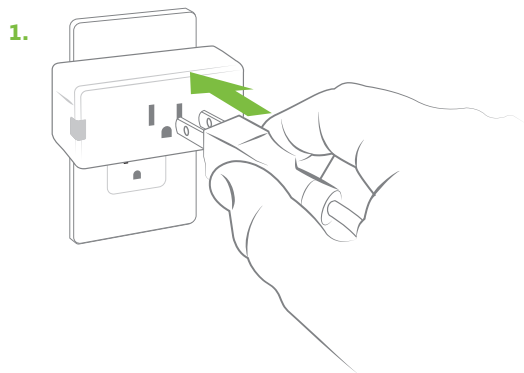

1. Press to turn ON and OFF.

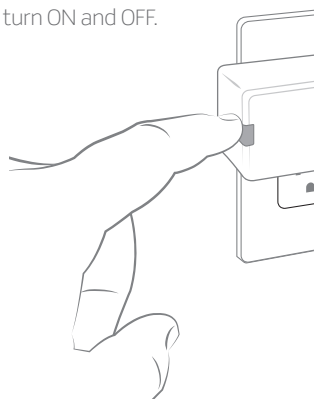

9


Test My Leviton app control

1. Open the My Leviton app.

2. Tap icon to turn ON/OFF.

Quick tip:

- The My Leviton app includes many features such as: scheduling, remote control, vacation mode, auto-shutoff, room scenes, and advanced options for bulb type, fade rates, preset light level, and minimum dim/maximum brightness.
- Additional self-service support options can be found in the My Leviton app or at leviton.com/decorasmart.

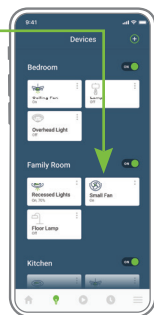

Connect to My Leviton partners (optional)

Visit my.leviton.com for a complete list of compatible smart home products and services.

1. Tap the menu icon, select Integrations. Locate the desired service, select it, and follow instructions.



10

Connect to a Matter Controller (optional)

1. Make sure the device is in setup mode (status LED should be blinking GREEN). If the status LED is not blinking GREEN, see page 15 for instructions on how to put the device in setup mode.

- Using a mobile device, open the Matter Controller's app and select "Add Accessory" or "Add Device".
- Locate and scan the Matter setup code on the device or on the front page of this Getting Started Guide. If your device has already been enrolled to My Leviton, you can retrieve the Matter setup code at any time under "Device Settings" in the My Leviton app.
- Follow the instructions in the Matter Controller's app to complete the setup process and control your Decora Smart device using Matter.

If connecting to more than one Matter Controller:

- The Matter setup code on the first page of this manual, on the device, and in the My Leviton app can only be used for setup if the device is not already commissioned to a Matter controller.
- If the status LED briefly blinks AMBER when the device is put into setup mode, the device is already commissioned to a Matter Controller.
- To add the device to additional Matter controllers, use the Matter controller's app the device is already connected with to generate a new single use Matter pairing code.
- To delete all Matter connections, factory default the device (see page 13). The Matter setup code on the first page of the manual, on the device, and in the My Leviton app can now be used again for commissioning.


11

Pair an Anywhere Companion (optional)

1. Place the Anywhere Companion in Pairing mode by pressing the top rocker 5 times. Its status LED will blink GREEN.

2. Place the primary Decora Smart Wi-Fi Plug-In into pairing mode by pressing the Control Button 5 times. The status LED will flash GREEN/AMBER.

3. The Decora Smart Wi-Fi Mini Plug-In will automatically pair to the Anywhere Companion in pairing mode in wireless RF range. Once paired, the status LED will quickly flash GREEN to show a successful connection.

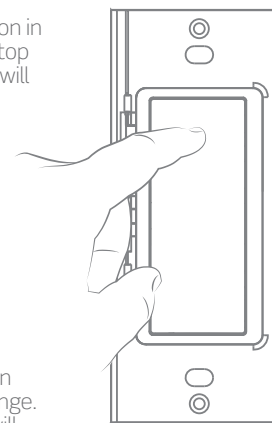

Learn more about Companion devices and find connection instructions at Leviton.com/anywhere.

12

What to do if...

Your Mini Plug-In Switch is not performing as expected:

- Make sure your plug-in is being supplied from a non-switched 120VAC, 60Hz source ONLY.
- Make sure the lamp or appliance you're controlling is working (local switch is ON) and check for burned-out bulbs.
- Make sure the lamp or appliance you're controlling does not exceed the 15A limit.

Not connected to Wi-Fi:


- If your device is setup in the My Leviton app, select your device, then select "Device Settings". On the "Device Settings" screen select "Reconfigure Wireless".
- Follow the prompts to reconfigure your device and update the Wi-Fi settings.

How do I clean my device?

- To clean, use a damp cloth with mild soap. DO NOT use disinfecting products, including foggers, sprays or other types of atomized cleaning agents.

If you need to reset to factory default:

- Press and hold the button.
- After the first 7 seconds it will turn AMBER. Continue holding.
- After 14 seconds, it will quickly flash RED/AMBER. Release button and your plug-in device is reset.

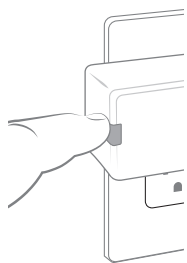

Visit leviton.com/decorasmart or contact our technical support team for additional help.

13

Status LED

COLOR	ACTIVITY	STATUS
GREEN	Flashing	In setup mode and ready to be added to a Wi-Fi network.
GREEN	Slow Blink	Connecting to a Wi-Fi network on power up.
GREEN or Off	Solid	Normal operation, can be configured in a setup.
AMBER	Slow Blink	Device is not connected to the Wi-Fi network but attempting to reconnect.
GREEN/AMBER	Alternating Blink	Device is in wireless Anywhere Companion Pairing Mode.
RED	Blink	Wireless Anywhere Companion devices have unpaired or at max number of paired devices.
GREEN/RED/AMBER	Alternating Blink	Identify feature triggered from the My Leviton app.

Visit My.Leviton.com and select the "Support" option for additional diagnostic assistance.

14


Diagnostic LED

If your device is not connecting to the My Leviton app, the Status LED can be used as a diagnostic tool. Press the button for at least 2 seconds (but no more than 7 seconds) then release. The Status LED will blink a diagnostic code for 2 seconds.

COLOR	STATUS
AMBER	Not connected to Wi-Fi.
RED	Connected to Wi-Fi but not able to connect to the My Leviton cloud.
GREEN/AMBER, Alternating	Connected to Wi-Fi and My Leviton cloud but unable to set the time from the internet.
GREEN	Connected to Wi-Fi and My Leviton cloud is working properly.

Setup mode

- Hold the button for 7 seconds.
- After the first 7 seconds the status light will turn AMBER, then release.
- The Status LED will flash GREEN. The device is now in setup mode.

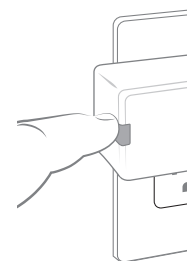

15

Safety first

WARNING: TO AVOID FIRE, PERSONAL INJURY OR DEATH DO NOT USE for the control of high power heating appliances such as portable heaters. There can be unexpected consequences if not used with care. For example, an empty coffee pot can be remotely turned on. If that should happen, your coffee pot could be damaged from overheating. If an electric heater is turned on by remote control while clothing is draped over it, a fire could result. This module will not control lighting that is used with electronic low-voltage and high frequency power supply transformers, nor high pressure discharge lamps (HID lighting). This includes mercury-vapor, sodium vapor and metal halide lamps.

WARNINGS:

- This product is to be installed and/or used in accordance with electrical codes and regulations.
- Indoor use only.
- If you are unsure about any part of these instructions, consult an electrician.
- Unplug unit when servicing loads.
- Leviton Wi-Fi enabled devices rely on Wi-Fi communication. For customers looking to install a large number of devices it is recommended to consult the wireless network's access point specifications to determine the maximum number of supported Wi-Fi devices. In some cases, for example large installations, it may be necessary to upgrade to newer high performance wireless grade access points to ensure proper operation.
- Save this instruction sheet. It contains important technical data along with testing and troubles. Troubleshooting information which will be useful after installation is complete.

ADDITIONAL RATINGS:

- Purpose of control: Operating Control
- Impulse Voltage: 2500V
- Action Control Type: 1
- Disconnection Type: Micro
- Pollution Degree: 2

16

Limited 2 Year Warranty & Exclusions

For Leviton's limited product warranty, go to www.leviton.com. For a printed copy of the warranty, call 1-800-824-3005.

FOR CANADA ONLY

For warranty information and/or product returns, residents of Canada should contact Leviton in writing at Leviton Manufacturing of Canada ULC to the attention of the Quality Assurance Department, 165 Hymus Blvd, Pointe-Claire (Quebec), Canada H9R 1E9 or by telephone at 1 800 405-5320.

FCC COMPLIANCE STATEMENT

The enclosed device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (i) This device may not cause harmful interference (ii) This device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Leviton could void the user's authority to operate this equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC CAUTION

Any changes or modifications not expressly approved by Leviton Manufacturing Co., Inc., could void the user's authority to operate the equipment.

FCC SUPPLIER'S DECLARATION OF CONFORMITY

Model D215P - Wi-Fi Mini Plug-In Switch is manufactured by Leviton Manufacturing Co., Inc. 201 N. Service Road, Melville, NY 11747. www.leviton.com This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC STATEMENT

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

RF EXPOSURE AND CO-LOCATION

To comply with FCC OET Bulletin 65 and ISED RF exposure limits for general population and uncontrolled exposure, this device shall be installed and operated with a minimum distance of 7.9 inches (20 cm) between the radiator and your body. Also, must not be co-located or operated in conjunction with any other antenna or transmitter.

PATENT INFORMATION

Patents covering this product, if any, can be found on Leviton.com/patents.

Copyright and Trademark Information

Decora and Decora Smart are the registered trademarks of Leviton Manufacturing Co., Inc., registered in the U.S., Canada, Mexico and China. Google, Android, Google Play and Google Home are trademarks of Google LLC. Alexa, and related logos are trademarks of Amazon.com, Inc. or its affiliates. Apple®, Apple Home®, and Siri® are trademarks of Apple Inc., registered in the U.S. and other countries. Matter, IFTTT and the Wi-Fi CERTIFIED logo are trademarks of their respective owners and any use of such marks by Leviton is under license.

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Use herein of other third party trademarks, service marks, trade names, brand names and/or product names are for informational purposes only, are/may be the trademarks of their respective owners; such use is not meant to imply affiliation, sponsorship, or endorsement. No part of this document may be reproduced, transmitted or transcribed without the express written permission of Leviton Manufacturing Co., Inc.

Copyright 2023 Leviton Mfg. Co., Inc.

WEB VERSION