


Instructions for Use - OPT-X[®] SDX Wallmount Enclosures

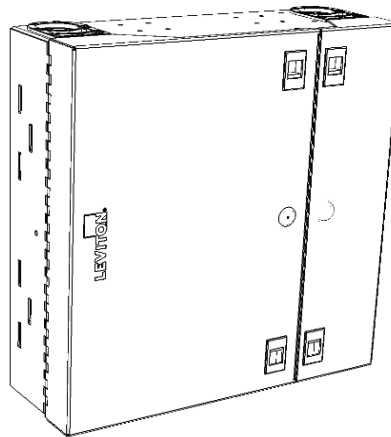

5WLRG-12C

WEB VERSION

FIBER CONNECTOR SAFETY WARNINGS

SAFETY INFORMATION

- Always wear safety glasses.
- Isopropyl alcohol is flammable and may cause eye irritation. In case of contact with eyes, flush with water for at least 15 minutes. When using isopropyl alcohol, always assure proper levels of ventilation. In case of ingestion, consult a physician immediately.
- Never look directly into a laser light source, point source at a person's eyes, or point source at reflective surfaces.
- When working on a fiber link, always turn laser source off, or disconnect completely.
- Always dispose of fiber debris properly, preferably using sticky tabs.
- Do not place food or beverages in the vicinity of the work area.
- Thoroughly wash face and hands after terminating fiber.
- Carefully remove any fiber debris that may have been stuck to clothing, or left in work area, and dispose of properly.

TIPS AND RECOMMENDATIONS





- Using isopropyl alcohol, thoroughly clean exposed fiber and buffer ensuring both are free from dust, oil, and debris.
- Do not lay ferrule dust covers on a dirty or dusty surface.
- Always use proper tools and/or accessories to terminate fibers and clean connector tips.

QUICK START GUIDE

The following instructions will help you quickly install your Leviton OPT-X Wallmount Enclosure for use in your equipment cabinet or rack. For detailed information on each step, go to the page number listed below.




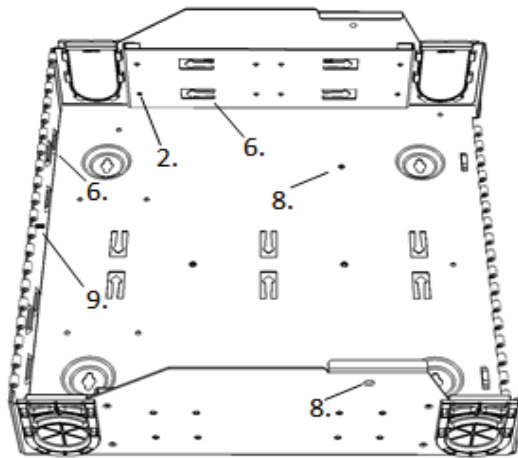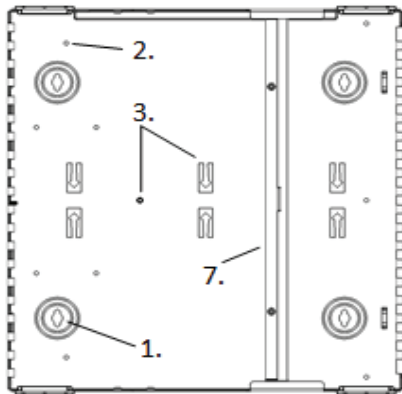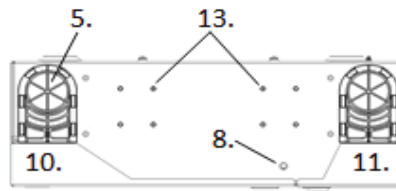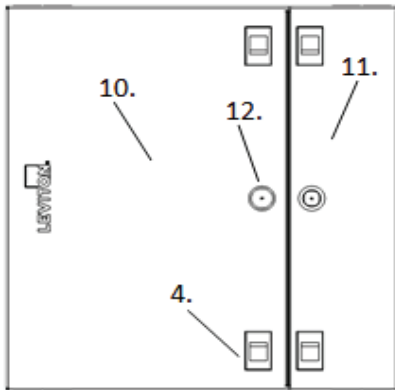


Safety Instructions	Pg. 2
Quick Start Guide	Pg. 2
Equipment Guide	Pg. 3
Standard Accessories	Pg. 4
Optional Accessories	Pg. 4
Required Hardware and Tools	Pg. 4
Configurations	Pg. 5
<ul style="list-style-type: none">• Adapter Plates• Splicing• SDX Cassette	
Mounting	Pg. 5
Grommet Preparation and Use	Pg. 5
Cable Installation Applications	Pg. 7
<ul style="list-style-type: none">• Adapter Plates• SDX Cassette• Splicing	
Grounding armored cabling	
Installing the Optional Lock Kit	Pg. 12
Labeling	Pg. 13

EQUIPMENT OVERVIEW - LARGE

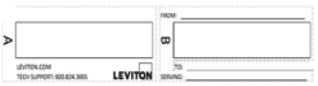

1. Mounting Eyelets
2. Wire management saddle mounting holes
3. Splice tray mounting point
4. Door latch
5. Cable entrance grommet
6. Cable lacing point
7. SDX bulkhead (Removable)
8. SDX bulkhead Mounting point
9. Grounding Stud
10. Service Door
11. Patch Door
12. Optional lock knockout blank
13. Optional Cable Clamp mounting point

STANDARD ACCESSORIES

Description	Image	Quantity in Lg Kit
Port Identification Label		1
Wire Management Saddles		8 Medium 3 Large
VELCRO® 5"		8
Grommets		4
#10 Wood Screw		4
Grounding Lug		1
Blank Adapter Plate		8
Lock CAM		1

OPTIONAL ACCESORIES

Lock and Key	5L000-LOK
Universal Clamp Kit (single)	5RCMP-KIT
Universal Clamp Kit (multi)	5RCMP-KT2
SDX to HDX adapter bracket	HDXAD-ACC
Splice Trays	(See splice tray configurator)
Splice Tray Mounting Hardware Kit	SPLMT-HKT

REQUIRED HARDWARE AND TOOLS

Mounting screws/lag bolts, wall anchors, washers, as appropriate
 Small Magnetic Torpedo level
 Powered drill or screw driver
 Scissors or safety blade utility knife

CONFIGURATIONS

There are five possible configurations using the large enclosures.

1. Field or pre-terminated cabling used with SDX adapter plates.
2. Pigtail splicing used with SDX adapter plates.
3. Pigtail splicing used with Splice modules.
4. Use with pre-terminated MTP® cabling and SDX cassettes or SDX to HDX adapter brackets.
5. Additionally, the large enclosure is convertible to a splice only enclosure.

See the Installation section for diagrams of each configuration.

MOUNTING INSTRUCTIONS

1. Determine the location to mount the enclosure. Use the following considerations in selecting a mounting location.
 - a. Appropriate mounting base per applicable codes and Authority Having Jurisdiction (AHJ).
 - b. Space around the enclosure to open the door and route patch cables.
 - c. Adequate space above or below the enclosure to maintain industry standard bend radius compliance of all cables entering the enclosure.
2. If using the large enclosure in the splice only configuration, install the splice tray hardware before mounting the enclosure.
3. Using a level, place the enclosure at the target mounting location and mark the four mounting hole positions.
4. Install the top two screws and verify the enclosure is level during final tightening of screws.
5. Install the bottom two screws.

GROMMET PREPARATION AND USE

Cable Grommets are provided and designed for use at both trunk and patch cord entrance points to the enclosure.

For Large

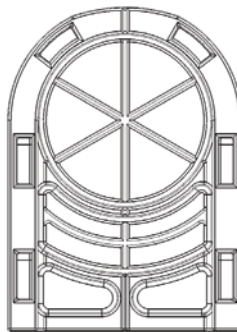


Figure 1

There are several options in configuring the grommets. When patching, it is recommended to cut a channel at the front of the grommet to easily install patch cords. When routing trunks, it may be desired to cut a channel at the rear of the grommet to allow for grommet removal for adding additional trunk cables. Grommet pass-through material can either be slit to limit dust and water egress or removed. To configure a grommet, use the following cutting methods:

1. Determine required opening in cable entrance grommet.
2. Determine whether slitting or removing material will be performed.
3. Using a sharp-edged tool, cut the appropriate opening in using the scored marking lines as shown in figure 2.
4. Optional – Cut a channel through the outer wall of the grommet for either trunk or patch cord routing.

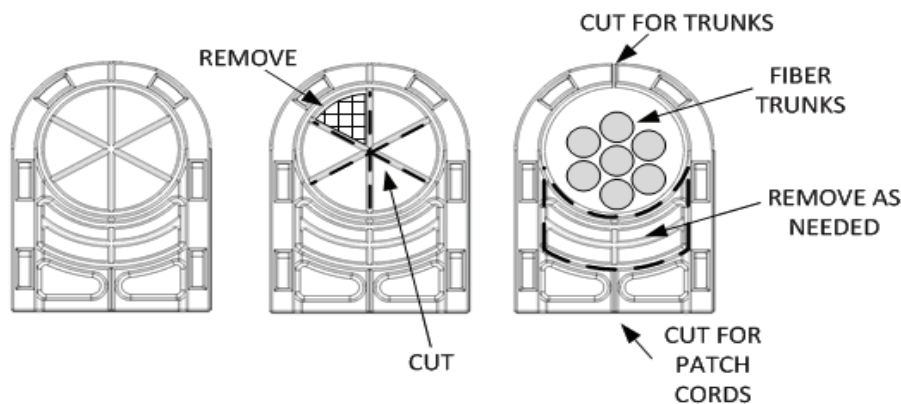


Figure 2

Estimated Fill Ratios


Cable Description (based on 50% fill)	Diameter in inches	Diameter in mm	Qty per Large Grommet
Micro Data Center 12s Plenum	0.16	4.06	26
Micro Data Center 24s Plenum	0.18	4.57	20
Micro Data Center 48s Plenum	0.231	5.87	12
Micro Data Center 72s Plenum	0.275	6.99	9
Micro Data Center 144s Plenum	0.36	9.14	5
Trunk 12s Distribution/Loose Tube	0.18	4.57	20
Trunk 24s Distribution/Loose Tube	0.38	9.65	5
Trunk 48s Distribution/Loose Tube	0.38	9.65	5
Trunk 72s Distribution/Loose Tube	0.44	11.18	3
Trunk 144s Distribution/Loose Tube	0.69	17.53	1
Trunk 12s Armored - MDP	0.495	12.57	3
Trunk 24s Armored - MDP	0.495	12.57	3
Trunk 48s Armored - MDP	0.584	14.83	2
Trunk 72s Armored - MDP	0.594	15.09	2
Trunk 144s Armored - MDP	0.708	17.98	1
Trunk 12s Armored - All types	0.55	13.97	2
Trunk 24s Armored - All types	0.95	24.13	1
Trunk 48s Armored - All types	1.05	26.67	1
Trunk 72s Armored - All types	1.23	31.24	0
Trunk 144s Armored - All types	1.73	43.94	0
Generic UTP Copper Cat5e	0.185	4.70	19
Generic UTP Copper Cat6	0.23	5.84	12
Generic UTP Copper Cat6A	0.33	8.38	6

CABLE INSTALLATION

1. Feed incoming cables through the grommet opening.
2. Optional – Install Universal Trunk Clamp kit and secure cable to clamp.
3. Remove required outer cable jacket leaving jacket at the closest lance point.
4. Secure the cable to the lance point with VELCRO or nylon tie wraps, as appropriate.
5. If applicable, secure aramid yarn to lance point.
6. When using armored cable, secure the ground wire from the armored cable to the provided grounding lug or ground by other code-compliant methods to the provided grounding stud.
7. Using the cable management saddles, route the breakout fiber legs to the patching or termination point, as shown in the configuration drawings (Figures 3 to 9).


ROUTING – LARGE ENCLOSURE

The following set up correctly positions Wire Management Saddles for Field/Pre-terminated cabling, Pigtail Splicing and use of Fan Out kits to SDX Adapter Plates.

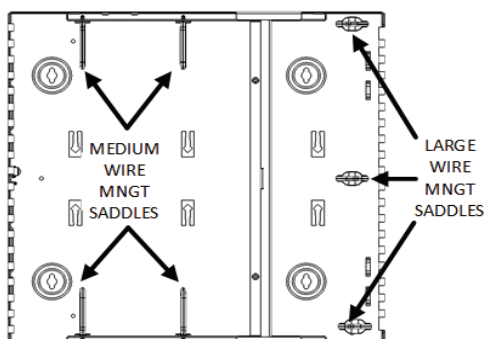


Routing of cables for each termination method is shown in the figures on the next few pages.


ROUTING FOR FIELD AND PRE-TERMINATED TERMINATION

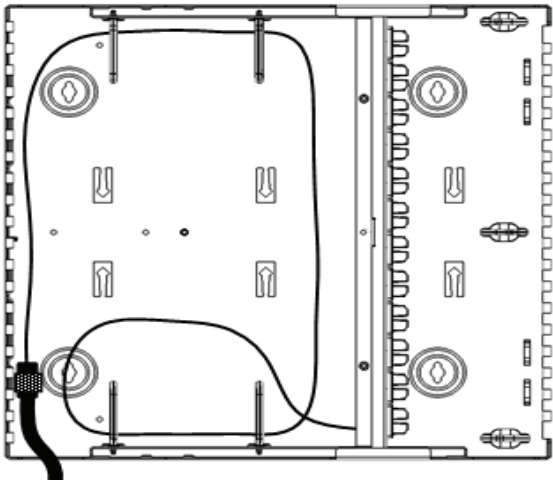

ROUTING FOR FIELD TERMINATED CABLING – PIGTAIL SPLICING

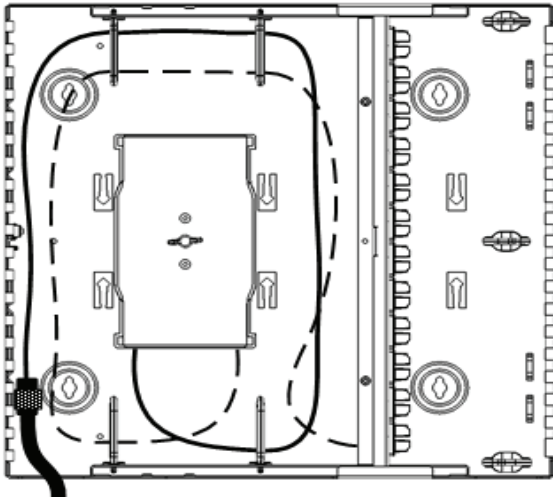

ROUTING FOR FIELD TERMINATED CABLING – FAN OUT

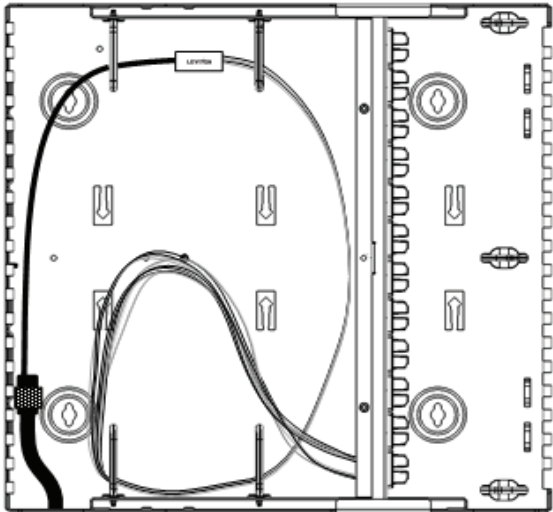

ROUTING FOR PRE-TERMINATED CABLING – CASSETTES

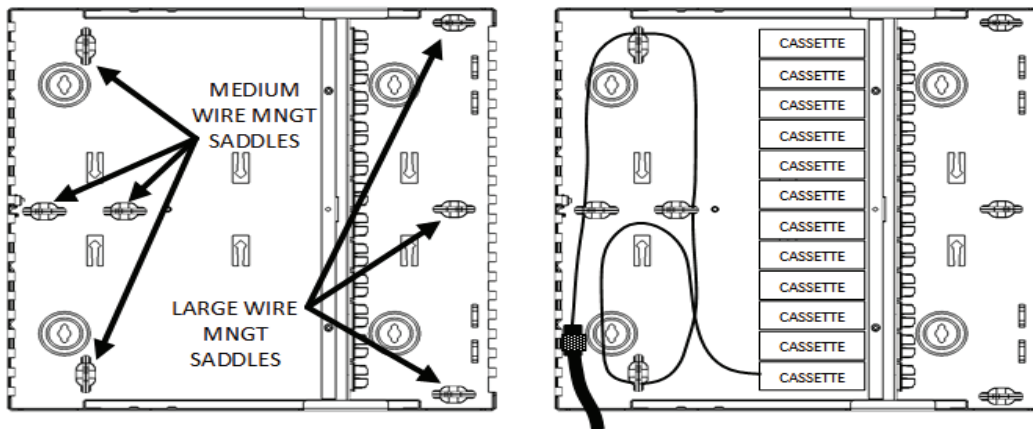


Figure 3

ROUTING FOR FIELD TERMINATED CABLING – SPLICE MODULES

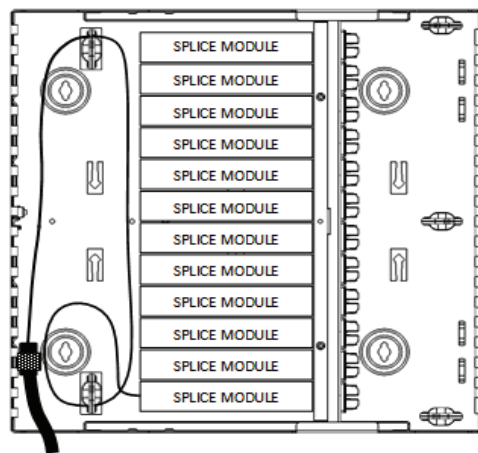


Figure 4

SPLICE ONLY CONFIGURATION (LARGE ENCLOSURE ONLY)

The large enclosure (5WLRG-12C) can be modified to perform splicing only for increased splicing capacity. To convert the large enclosure, remove the bulkhead from the enclosure base.

1. Remove the four screws located on the sides and bottom of the enclosure and remove the bulkhead.
2. Position FOCA saddles as shown in (Figure 5).
3. Install threaded studs into one or both mounting holes.

NOTE: If fully populating the enclosure an additional Splice Hardware Mounting Kit (SPLMT-HKT) will be required.

4. Install inbound trunks and outbound trunks or assemblies and secure via Optional Cable Clamp kit and/or to tiedown points at the entrance to the enclosure, as necessary.

When using Cassettes, configure the Wire Management saddles and route cabling, as shown in figure 3.

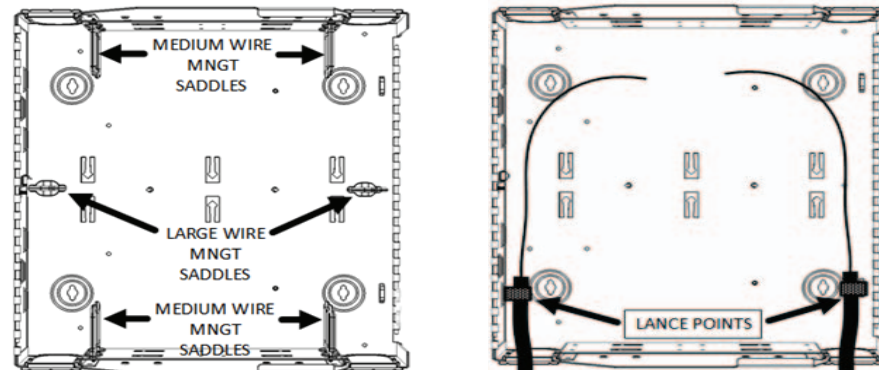


Figure 5

When performing splice terminations, it is recommended to pre-route and mark trunk and pigtail cabling prior to performing any routing, trimming and termination. Splice work can then be performed outside of the enclosure at the termination equipment. When routing terminated assemblies, route in the primary trunk cabling (dotted line in Figure 6) first, followed by the secondary trunk cabling or pigtail assemblies (solid line in Figure 6). To maintain future accessibility, keep each set of cabling (trunk and pigtail respectively) routed separately through the Wire Management saddles.

Securing splice trays is achieved with Splice Tray Mounting Hardware Kit (SPLMT-HKT), as identified previously in the Installation section of this document.

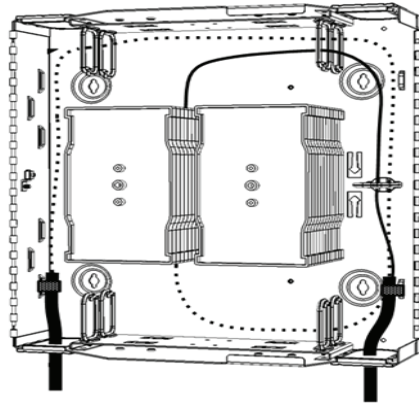


Figure 6

SECURING THE SPLICE TRAYS (LARGE – SPLICE ONLY CONFIGURATION)

Securing the splice trays requires two components:

- Splice Tray Mounting Kit including appropriate #10-32 threaded bolt and wing nut.
- VELCRO strip (bulk VELCRO or VELCRO supplied in the Splice Tray Mounting Kit).

1. Prior to mounting the enclosure, install appropriate #10-32 threaded bolt from the rear of the enclosure base and secure trays with wing nut.
2. Insert VELCRO strip under the first arrow lance point with the hook side facing up (Figure 7).

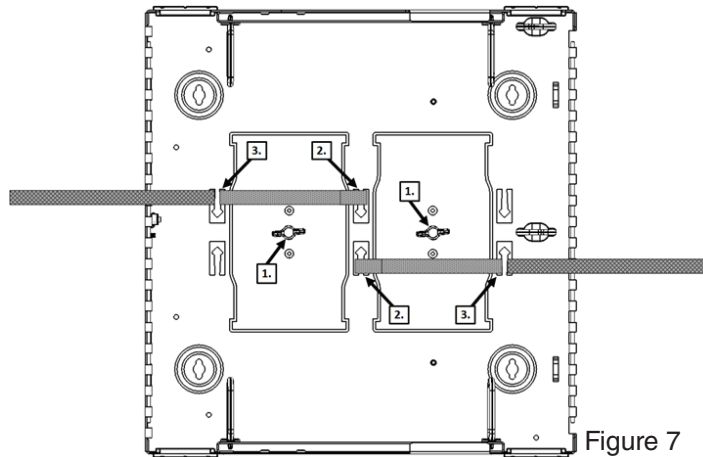


Figure 7

3. Place the VELCRO under and around the second lance point.
4. Fold the end over the splice trays (Figure 8).

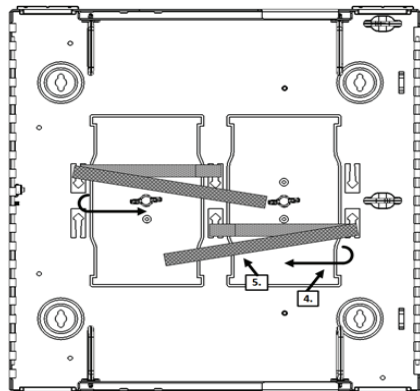


Figure 8

- 5. Secure the VELCRO to the trays (Figure 9).
- 6. Trim excess VELCRO, as necessary.

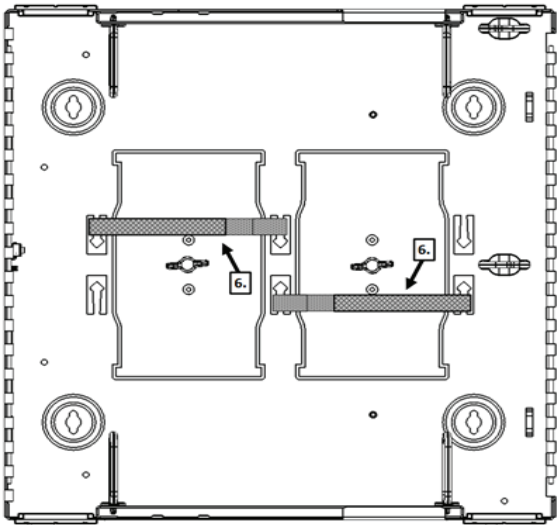


Figure 9


OPTIONAL LOCK KIT

Install the optional Lock Kit #5L000-LOK to secure the service door, patch door, or both doors of each enclosure, if required.

- 1. Remove the plastic lock blank.
- 2. Remove the CAM from the lock set, set the lock CAM aside.
- 3. Insert the lock set into the enclosure door.
- 4. Install the lock CAM provided in the Accessory Kit.

LABELING

A Port Identification Label is provided with each Wall Mount Enclosure. Affix the label to the inside of the patch bay door. You can label within the slot position cells with printed labels or via Microsoft Excel spreadsheets available via download at www.leviton.com.

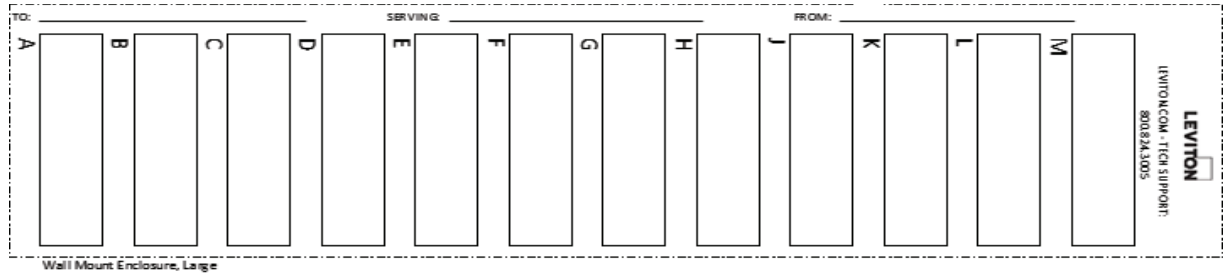

Affix labels, as shown in the table below.

Label Printing Organization by Fiber Adapter Type (Vertical Orientation)										
Adapter	Duplex SC (3 Pack)		Duplex SC (6 Pack)		Duplex LC (6 Pack)		Quad LC (6 Pack)		ST/FC (6 Pack)	ST/FC (8 Pack)
No. of Ports	6		12		12		24		6	8
	Number Scheme									
	1	1-2	3-4	1-2	1-2 3-4	5-6 7-8	1	1		
	2			3-4			2		2	
	3	5-6	7-8	5-6	9-10 11-12	13-14 15-16	3	3		
	4			7-8			4	4	5	
	5	9-10	11-12	9-10	17-18 19-20	21-22 23-24	5	6		
	6			11-12			6	7	8	

UNIVERSAL LABELING OF DEVICES

Vertical Orientation

- Use 3/8 in. or 3/4 in. label tape, depending on adapter plate.
- Total label length = 2 3/4 in.
- Panel section = 3/4 in. W x 2 3/4 in. H

Horizontal Orientation

- Use 3/8 in. or 3/4 in. label tape, depending on adapter plate.
- Total label length = 4 in.
- Panel section = 3/4 in. W x 4 in. L

NOTE: Ensure that the label surface area is clean of dirt, oil, and debris. Use isopropyl alcohol or a simple soap and water solution when wiping down the surface area.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Patents covering this product, if any, can be found on Leviton.com/patents.

TRADEMARK STATEMENT

LEVITON, and LEVITON Block Design are trademarks of Leviton Manufacturing Co., Inc. and are registered trademarks in many countries throughout the world.

OPT-X is a trademark of Leviton Manufacturing Co., Inc. and is registered in many countries including Bahrain, Canada, China, EU Member States, Jordan, Kuwait, Mexico, Oman, Qatar, Saudia Arabia, United Arab Emirates, United Kingdom, and United States.

TRADEMARK DISCLAIMER: Use herein of third party trademarks, service marks, trade names, brand names and/or product names are for informational purposes only, are/may be the trademarks of their respective owners; such use is not meant to imply affiliation, sponsorship, or endorsement.

FOR CANADA ONLY

For warranty information and/or product returns, residents of Canada should contact Leviton in writing at **Leviton Manufacturing of Canada ULC** to the attention of the **Quality Assurance Department, 165 Hymus Blvd, Pointe-Claire (Quebec), Canada H9R 1E9** or by telephone at **1-800-405-5320**.

LIMITED 1 YEAR WARRANTY

For Leviton's limited 1 year product warranty, go to www.leviton.com. For a printed copy of the warranty, call 1-800-824-3005.

