

LEVITON®

Applications Cookbook Intellect™

Version 1.0

FOR REFERENCE ONLY

INTELLECT COOKBOOK NOTES



1. Refer to manufacturer's data sheets and installation instructions prior to installation
2. Line feed 120/230/277VAC, 60 Hz
3. Ground not shown. Ground devices per applicable national and local codes and best practices
4. For emergency power situations, illustrations assume transfer switch by others upstream of shown devices
5. Line voltage load not to exceed contact rating per device specifications
6. Power packs receiving separate feeds for switched loads and self power must have both feeds on the same phase
7. All low-voltage devices consume current. Device power budget is estimated for these details - additional power sources may be required. See product literature for power specifications.
8. Maximum run length for analog wiring is 1000 feet @ #18 AWG
9. Sensors wired in parallel will cause line voltage relay closure when occupancy is detected by any unit.
10. Devices in series requiring contact closure from a single device (clock input, demand response, emergency, etc.), must follow these wiring conventions: First device in sequence provides the +V to the triggering relay; signal from closure attached to all devices in sequence input; com from first device in sequence attached to com on all devices in sequence.
11. Ultrasonic ceiling mount sensors should be located a minimum of six (6) feet from HVAC supply/return vents
12. Trough mounted, pendant mounted, and pendant mounted indirect lighting sources affect the operation of locally mounted sensors. Contractor is responsible for adjusting sensor locations to allow for proper operation
13. Contractor is responsible for proper sensitivity and time delay settings for non-adaptive products, following the manufacturer's recommended placement, and filed verification of circuits with respect to power pack placement
14. Contractor is responsible for coordinating the operational options of sensors and power packs with the specific work requirements:
 - Work relevant energy code requirements affect circuits to be controlled and their control characteristics
 - One power pack is required for each controlled circuit
 - Refer to power pack data sheet for power output and installation guide for maximum number of sensors connected to a power pack
 - If multiple circuits are to be controlled by a sensor, auxiliary relays may be used in conjunction with a power pack
15. Ceiling sensors mounted over doorways should be place one (1) foot inside the threshold
16. Up to 100 Mark VII style ballasts may be controlled per daylighting zone by mini-Z
17. All relays shown in de-energized state
18. Individually cap off unused leads
19. One-line parenthesis use:
 - (X) — Functional
 - (#) — Terminal
20. Plug load control — Commercial receptacle P/Ns:
 - Standard Duplex:
 - Split Control (1 Outlet) CR015-1PX, CR020-1PX
 - Full Control (2 Outlets) CR015-2PX, CR020-2PX
 - Decora:
 - Split Control (1 Outlet) 16252-1PX, 16352-1PX
 - Full Control (2 Outlets) 16252-2PX, 16352-2PX

INTELLECT COOKBOOK NOTES

DRAWING SYMBOLS

⊕ No connection

⊖ Connection






DRAWING ABBREVIATIONS

LC	Luma-CAN
LV	Low voltage
HV	High voltage switch (maintained)
LVM	Low voltage switch (momentary) - equal to Leviton 1081 (toggle) or Leviton 56081 (Decora)
LVT	Low voltage switch (maintained) - equal to Leviton 12021-2 (toggle) or Leviton 56021-2 (Decora)
LV2	IRC low voltage switch
UON	Unless otherwise noted
BLK	Black
WHT	White
BLU	Blue
YEL	Yellow
ORG	Orange
VIO	Violet
BRN	Brown





TABLE OF CONTENTS

PAGE	DESCRIPTION
5	Small Office—Intellect Single Zone
6	Small Office—Intellect Dual Zone
7	Open Office
8	Conference Room
9	Classroom
10	Common Area

SMALL OFFICE—SINGLE ZONE

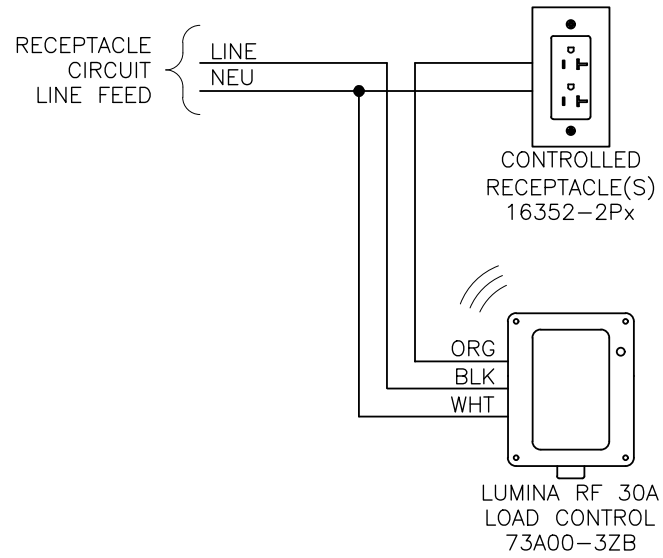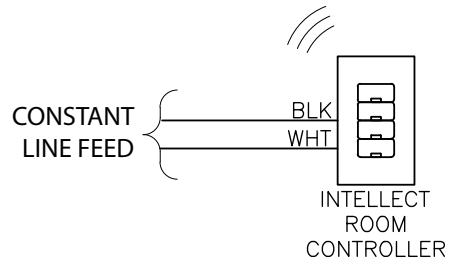
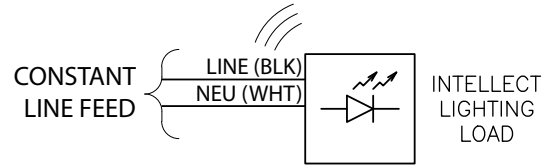


SMALL OFFICE—DUAL ZONE

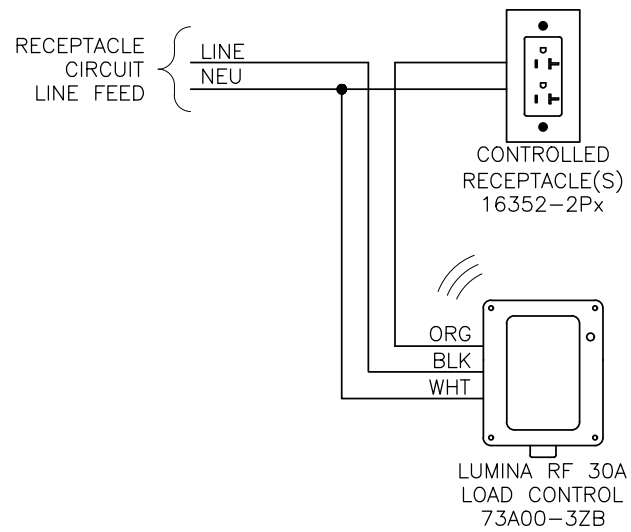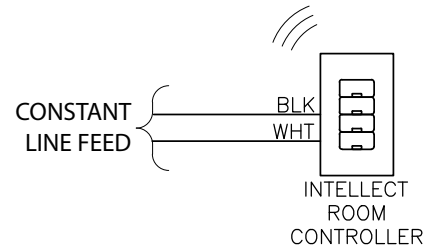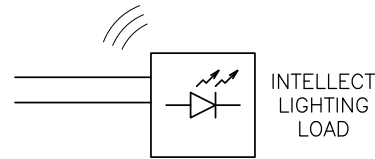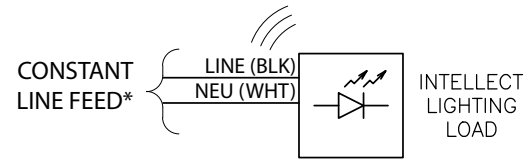



*TYPICAL AT ALL FIXTURES

OPEN OFFICE

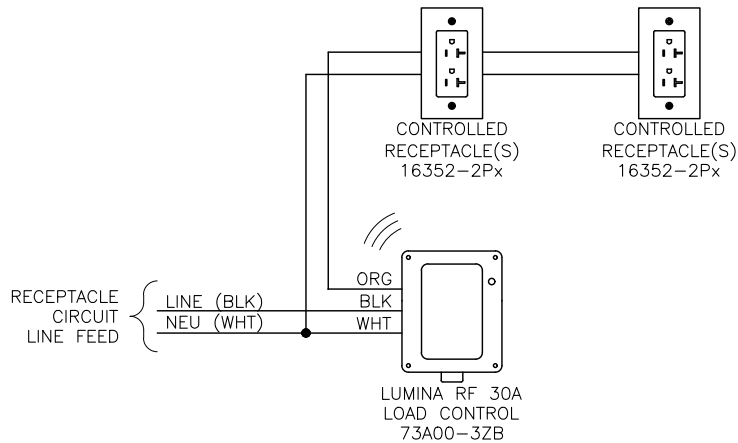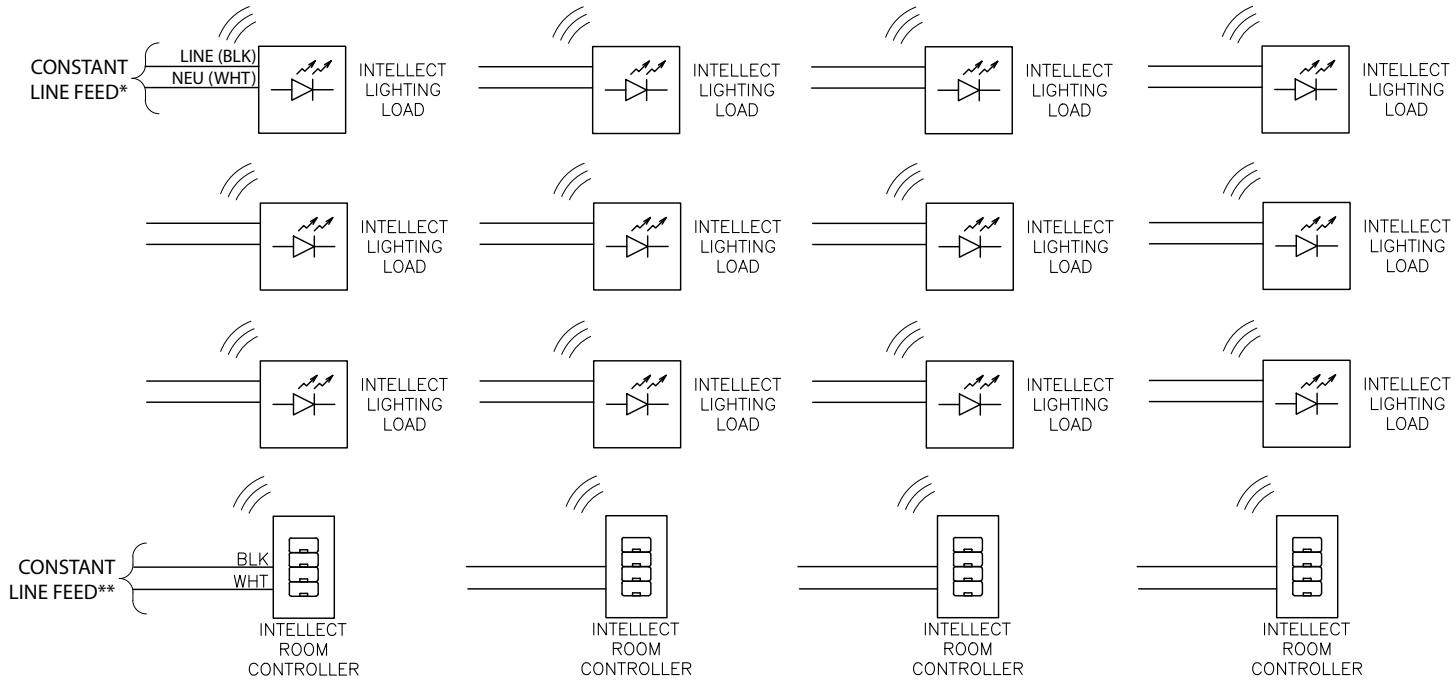



*TYPICAL AT ALL FIXTURES
 **TYPICAL AT ALL CONTROLLERS

CONFERENCE ROOM

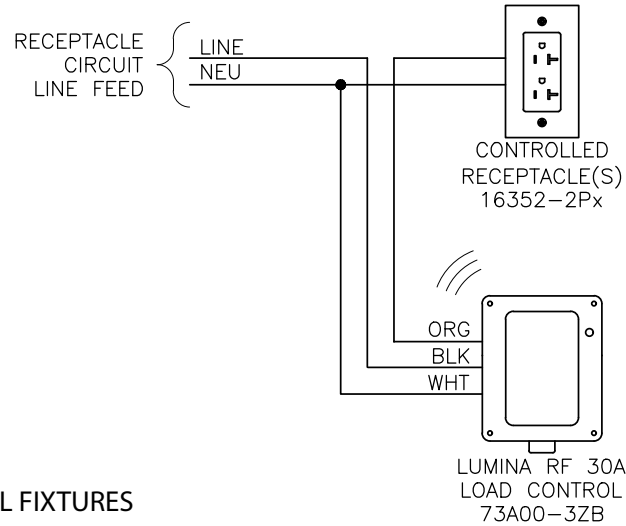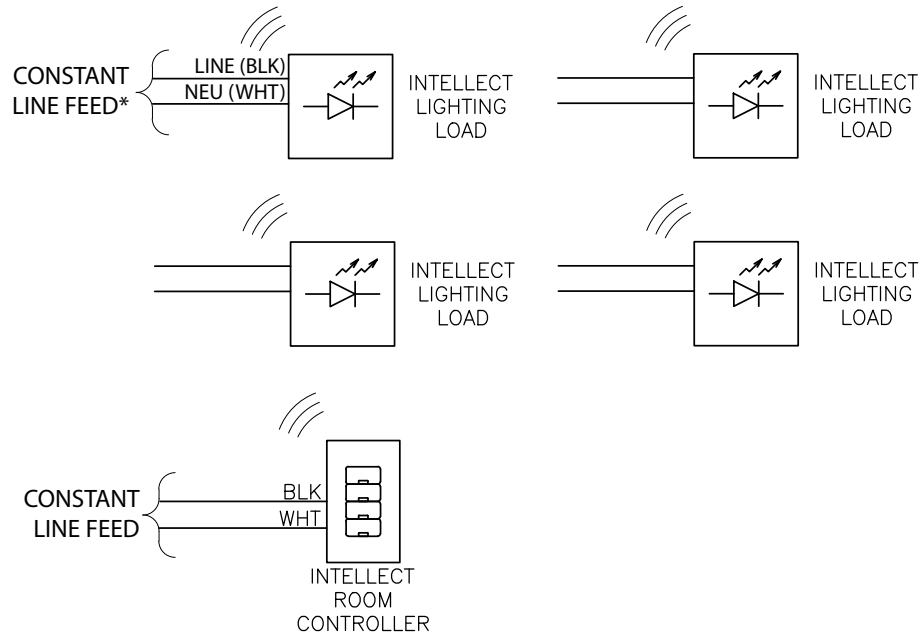





*TYPICAL AT ALL FIXTURES

CLASSROOM

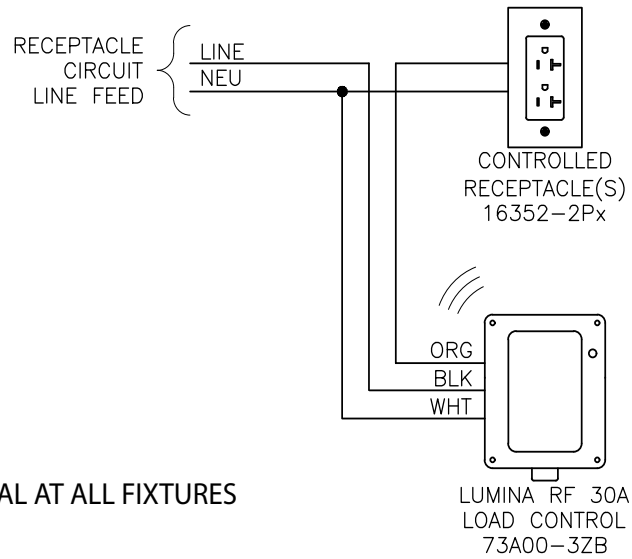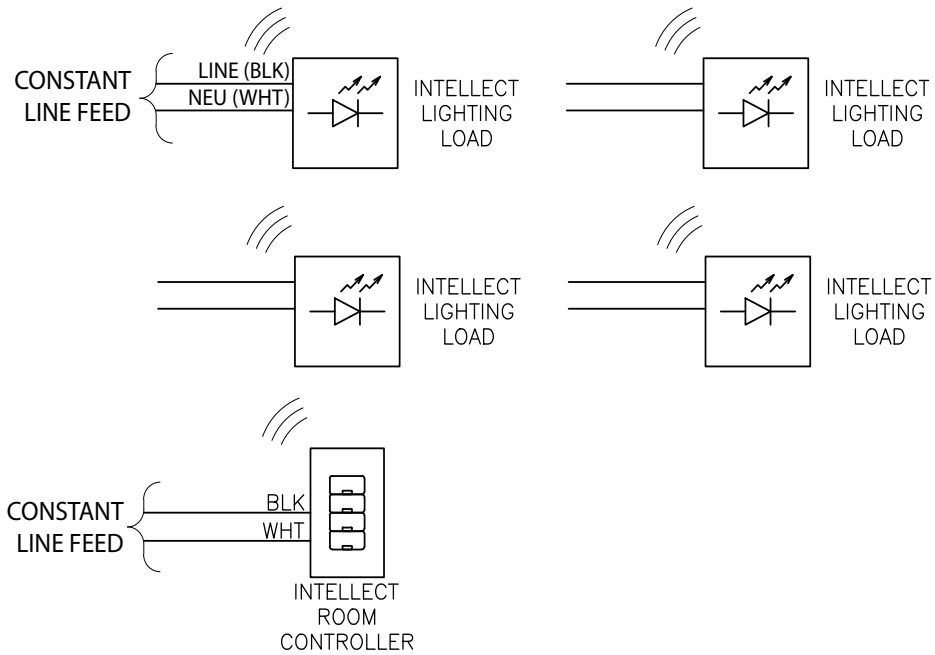

*TYPICAL AT ALL FIXTURES

COMMON AREA

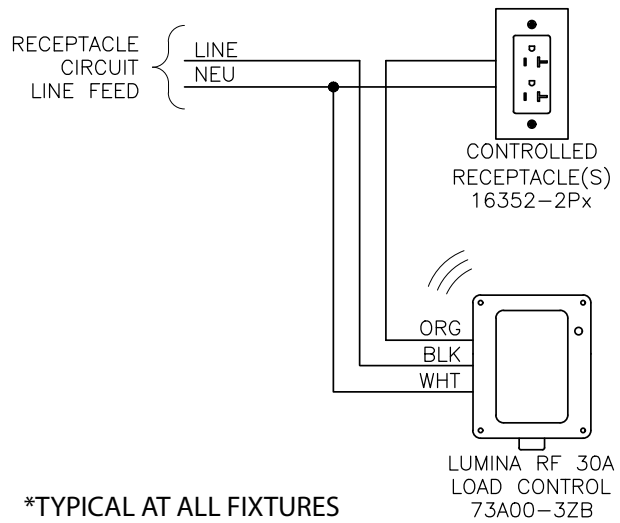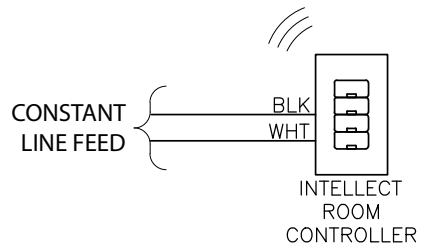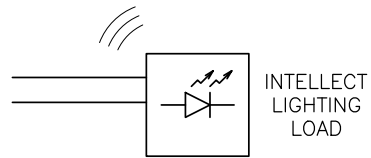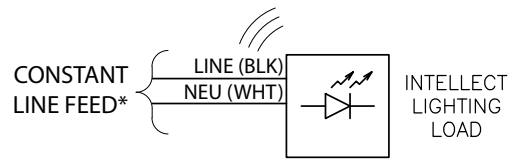

*TYPICAL AT ALL FIXTURES



Leviton Manufacturing Co., Inc. Energy Management, Controls and Automation

20497 SW Teton Avenue, Tualatin, OR 97062 **tel** 800-736-6682 **fax** 503-404-5594 **tech line** (6:00AM-4:00PM PT Mon-Fri) 800-959-6004

Leviton Manufacturing Co., Inc. Global Headquarters

201 North Service Road, Melville, NY 11747-3138 **tel** 800-323-8920 **fax** 800-832-9538 **tech line** (8:30AM-7:00PM ET Mon-Fri) 800-824-3005

Visit our Website at: www.leviton.com/intellect

©2017 Leviton Manufacturing Co., Inc. All rights reserved. Subject to change without notice.